

RM-991

Operating Instruction

CHUNGHOP®

- It can be used in most parts of the world.
- It can control most brands of devices that are commonly used in the world.
- Easy programming by auto-search or manual search.



ENGLISHP1~P14

Code form for the components....P15~P28

SETUP CODES FOR AC

ALPIN.....	5115
AMICO.....	5325
AMCOR.....	5115,5320,5321,5322
.....	5323
Aidelong.....	5038,5039,5040
Altue.....	5108,5109,5110
Akira.....	5046
Aoli.....	5194
Aoke.....	5129,5130
Aucma.....	5019,5020,5021,5022
AUX.....	5123,5124,5125,5126
.....	5127,5128,5191
Baixue.....	5131
Beijingjingdian.....	5080
BELCOR CLASSIC.....	5115
Boerka.....	5065,5299
Borler.....	5134,5135
Bosgao.....	5115,5136,5137
Boshi.....	5313
Caixing.....	5002,5185,5186
Carrier.....	5003,5294,5295,5296
.....	5297,5298
Changfel.....	5187
Changhong.....	5003,5230,5237,5238
.....	5242,5253,5307,5308
.....	5309,5319
Changling.....	5004,5005,5006,5007
.....	5008,5009,5010,5011
.....	5012,5189
Chuanghua.....	5115,5139,5140,5288
Chunlan.....	5112,5203
Conrowa.....	5033,5041,5042,5043
.....	5044,5283
Corona.....	5255,5256,5257,5258
.....	5259,5260,5261,5262
Daewoo.....	5002,5033,5190,5191
Daikin.....	5284,5285,5286,5287
Dajinxing.....	5199,5200
Daotian.....	5180,5181
Diboer.....	5001,5002,5030,5031
Dongao.....	5001,5002,5030,5031
Dongxia.....	5115,5146,5148
Dongxibao.....	5082
Dunan.....	5003,5188
ELCO.....	5003
ELECTER.....	5002,5003,5115,5325
.....	5324
Falanbao.....	5001,5002,5030,5031
Feigo.....	5288
Fujitsu.....	5272,5273,5274,5275
.....	5276
Geer.....	5196,5197
Galanz.....	5033,5079
Geweier.....	5001,5002,5030,5031
Geyang.....	5001,5002,5030,5031
Goldstar.....	5289
Gree.....	5095,5096,5190,5208
.....	5209,5210,5281,5282
Guangda.....	5115,5142,5143,5145
Guqiao.....	5119
Haier.....	5086,5186,5288,5291
Hisense.....	5028,5029,5230,5233
.....	5238
Hitachi.....	5006,5271
Huabao.....	5300,5301,5303,5304
.....	5305,5317,5318
Huagao.....	5001,5002,5030,5031
.....	5220
Huake.....	5154
Hualing.....	5031,5033,5052,5053
.....	5054,5119,5193
Huamei.....	5151
Huanghe.....	5081,5119
Huifeng.....	5059,5060,5061,5062
INYCIN.....	5002,5003,5030,5031
.....	5032,5033,5036,5037
.....	5079,5192
Jiale.....	5170
Jiangcheng.....	5001,5030,5002,5031
Jiangnan.....	5198
JMSTAR.....	5149,5150
Jinbeijing.....	5157
Jinlu.....	5001,5002,5030,5031
Jinsong.....	5083,5084
Johson.....	5279
Jichun.....	5001,5002,5030,5031
Kangli.....	5088,5312
Keer.....	5001,5002,5030,5031
Kelong.....	5193,5266,5300,5301
.....	5302
Keming.....	5001,5002,5030,5031
Klimatair.....	5026,5189
Konka.....	5033,5158,5159
Kris.....	5179
MCQUAY.....	5292
Langge.....	5001,5002,5030,5031
LG.....	5204,5205,5206,5207
.....	5289,5290
LIANGYU.....	5003
LOREN-SEBO.....	5085
Loren-Sebo.....	5189
MD.....	5003,5060,5201,5202
.....	5217
Meidian.....	5001,5002,5030,5031
Meiling.....	5296,5297,5298
Mingyi.....	5001,5002,5030,5031
MITSUBISHI.....	5325

SETUP CODES FOR AC

Mitsubishi.....	5503,5033,5055,5056
.....	5057,5058,5076,5080
.....	5192,5217,5220,5277
.....	5278,5279,5280,5283
National.....	5013,5115,5119,5120
NEC.....	5230,5231,5232,5233
.....	5234,5235,5236,5237
.....	5238,5239,5240,5241
.....	5242,5243,5244,5245
.....	5246,5247,5248,5249
.....	5250,5251,5252,5253
.....	5254
Nikko.....	5045
Ojun.....	5001,5002,5030,5031
OPAL.....	5115
Others.....	5064
Panasonic.....	5053,5054,5119
.....	5120,5121,5122
Panda.....	5092,5093,5094
Philips.....	5001,5002,5030,5031
.....	5114,5115,5116
Qidi.....	5133
Rayao.....	5306,5047,5048,5049
.....	5050,5051,5202,5261
RAYBO.....	5324
Ricai.....	5160
Rijiang.....	5115,5161
Rowa.....	5063,5211,5212,5213
.....	5214,5215,5216,5217
.....	5218,5219,5220,5221
.....	5222,5223,5224,5225
.....	5226,5227,5228,5229
Saijo Denki.....	5296,5310,5311
Samsung.....	5023,5024,5025,5026
.....	5027,5189
Sandi.....	5132
Sanzuan.....	5165
SANYO NEC.....	5320,5321,5322,5323
Shangling.....	5033,5070,5071,5072
.....	5073,5074
SHARP.....	5115,5263,5264,5265
.....	5266,5267,5268,5269
Shenbao.....	5115,5163
Shengfeng.....	5013
Sacon.....	5115,5167
SHINING.....	5033
Sova.....	5303
STARWAY.....	5115
Sunburg.....	5065
TADIAIR.....	5320,5321,5322,5323
TADIRAN.....	5115,5320,5321,5322
.....	5323
TCL.....	5033,5079,5116,5117
.....	5118,5314
Teco.....	5086
Tianjinkongtiao.....	5175
Tianyuan.....	5105,5106,5107
Tobo.....	5066,5067,5068,5069
Tongyi.....	5001,5002,5030,5031
Toshiba.....	5003,5270
UNI-AIR.....	5088,5312
Wanbao.....	5102,5103,5104
Weili.....	5078,5087,5088,5089
.....	5090,5091
Weiteli.....	5195
Whirlpool.....	5115,5119,5279
Wufeng.....	5183,5184
SAST.....	5155,5156
UTTLEDUCK.....	5176,5177,5178
Xiayang.....	5001,5002,5030,5031
Xileng.....	5013,5111,5113,5186
FRESTECH.....	5115,5169
SHINCO.....	5099,5100,5101,5173
.....	5174
Xinle.....	5097,5098
YAIR.....	5000,5001,5002,5003
.....	5171,5172
Yidazhou.....	5001,5002,5030,5031
ELECTROLUX.....	5299,5316
York.....	5292,5293
Yutu.....	5013,5014,5015,5016
.....	5017,5018,5019,5033
.....	5308,5315
JINDA.....	5075
Zhongyi.....	5182
Zuodan.....	5219





Thanks for using this remote control! Please follow the steps below to set your remote control before use, and reserve the User Manual for future setting.

Product Profile

This remote controller is a new type combined universal remote controller with LCD remotely, learning function, and powerful built-in code base. Through simple setting, it can control display many kinds of infrared controlled household electrical appliances, such as TV/TXT, DVD, CD, VCR, SAT/CABLE, and A/C (air conditioner), etc. There are many functions: learning function, permanent memory function, macroinstruction function, key transferring function, clock function, alarm clock function, key buzzer function, backlight function, volume sharing function, weak battery hint function, and restoring original factor ysetting function, etc. It is easy operating and practical. It is an ideal choice of a combined remote controller for many kinds of household electrical appliances and the replacement of those lost and damaged.

TV, VCR, DVD, SAT, CD, A/C (air-conditioner) keys and corresponding functions

No.	Key Title	TV Key Function	DVD Key Function	CD Key Function	SAT Key Function	VCR Key Function	A/C Key Function
1	SET	SET	SET	SET	SET	SET	SET
2	ON-OFF	POWER	POWER	POWER	POWER	POWER	POWER
3	MENU MODE	MENU	MENU	MENU	MENU	MENU	MODE
4	EXIT	EXIT	EXIT	EXIT	EXIT	EXIT	WIND
5	TEMP ▲	UP	UP	UP	UP	UP	TEMP+
6	TEMP ▼	DOWN	DOWN	DOWN	DOWN	DOWN	TEMP-
7	RIGHT	RIGHT	RIGHT	RIGHT	RIGHT	RIGHT	AUTO
8	LEFT	LEFT	LEFT	LEFT	LEFT	LEFT	MANUAL
9	OK	OK	OK	OK	OK	OK	—
10	NORMAL	NORMAL	--	--	TV/RADIO	--	--
11	AUDIO	AUDIO	CLEAR	--	GUIDE	ANT/SW	--
12	NICAM	NICAM	A/B	--	INFO	--	--
13	SLEEP	SLEEP	REPEAT	REPEAT	SIGNAL	--	--
14	TV/AV	TV/AV	SETUP	INPUT	INPUT	INPUT	--
15	DISPLAY	DISPLAY	DISPLAY	DISPLAY	EPG	DISPLAY	--
16	M1	RED	TITLE	--	EAST	--	--
17	M2	Green	SUBTITLE	--	WEST	--	--
18	M3	Yellow	DISC	DISC	HELP	DISC	--
19	M4	Blue	AUDIO	AUDIO	AUDIO	AUDIO	--
20	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	--
21	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	--
22	MUTE	MUTE	MUTE	MUTE	MUTE	--	--
23	REVERSE	REVERSE	RETURN	RETURN	RETURN	--	--
24	PROG+	PROG+	NEXT	NEXT	CH+	NEXT	--
25	PROG-	PROG-	PREV	PREV	CH-	PREV	--
26	1~10	1~10	1~10	1~10	1~10	1~10	--
27	1/-	1/-	1/-	1/-	1/-	1/-	--
28	12▲	Function	Function	Function	Function	Function	--
29	PAGE HOLD	PAGE HOLD	Forward	Forward	Forward	Forward	--
30	TEXT MODE	TEXT MODE	PLAY	PLAY	PLAY	PLAY	--
31	EXPAND	EXPAND	FF	FF	FF	FF	--
32	REVEAL	REVEAL	RECORD	SHUFFLE	FAV	RECORD	--
33	TV MODE	TV MODE	STOP	STOP	STOP	STOP	--
34	MIX MODE	MIX MODE	PAUSE	PAUSE	PAUSE	PAUSE	--

SETUP CODES FOR DVD

Longzhipei	3472
Magnavox	3013
Majestic	3398,3453
Malata	3190,3197,3211,3212
	3261,3334,3335,3339,3485,3501
Marantz	3399,3400,3401,3415
Matsui	3092,3095,3124,3162
Maxview	3079
Mega tanss	3402
Microsoft x-box	3032
Mitsubishi	3071,3403
Mitsui	3404,3405,3457
Mitzu	3367,3439
Monyka	3093,3167
Mtb	3406,3407
Mustek	3130
Mutek	3048
Nakamichi	3126,3408
Napa	3409,3465
Neufunk	3093
Nintaus	3191,3223,3259,3267,3268,3269
	3270,3278,3281,3317,3318,3479
	3508,3510
Norcent	3410
Okon	3260
Onkyo	3115,3231,3411,3412
Orion	3095
Ortron	3092,3180
Pacific	3085,3086,3087,3088
Pai gao	3515
Panasonic	3101,3105,3142,3143,3144
	3150,3153,3163
Panasonic/national	3015,3016,3039,3049
	3184,3202,3392,3461,3462
Panda	3226,3239,3240,3241,3290,3293
Philco	3413,3414,3451,3456,3460
Philips karaoke	3003,3084,3111,3157
	3164,3181,3182,3200,3331
	3340,3341,3342,3415,3416,3452
Philco	3169
Phonotrend	3098
Pioneer	3013,3059,3103,3118,3120
	3141,3158,3159,3168,3232,3417
Power sound	3367
Primas	3133
PROSONIC	3440
QISHENG	3193,3225,3280,3286,3289
	3470,3493,3494,3495,3496,3511,3519
Raito	3093
RCA	3029,3070,3076,3104,3418,3419
REC	3094,3185
Revoy	3171
Roadstar	3094,3098,3185
Rotel	3178
ROYAL	3413,3460
Sampo	3097
Samsung	3047,3075,3113,3149,3175
	3192,3194,3205,3237,3292,3337,3390
	3420,3454
Sansui	3095,3201,3234
Sanyo	3090,3421,3422
SAST	3199,3208,3226,3247
	3248,3264,3328,3330,3476
Schneider	3088
SEG	3093
Sharp	3038,3110,3155,3179,3423
	3424,3425
SHERWOOD	3507
Shinco	3121
SHNCO	3189,3198,3296
SHUMALING	3224
Skymaster	3048,3065
SKYWORTH-RGB	3210,3213,3220,3222
	3246,3284,3285,3288,3307,3309,3481
	3489,3502,3509
SM Electronic	3169
SMC	3426
SONASHI	3492
SONICO	3447
Sony	3017,3033,3041,3066,3100,3122
	3123,3138,3139,3140,3148,3183,3228
	3230,3365,3366,3448
SOUNDTRACK	3445
SOWA	3343
STAR	3306
SUPERSONIC	3413,3427,3460
SVA	3296
Sylvania	3119,3152,3156
Tatung	3068,3174
TCL	3188,3203,3227,3242,3243
	3308,3503
Teac	3044,3127,3168,3173,3428
Technics	3184
Tevison	3092
Thomson	3077,3112,3161
	3186,3187,3271,3418
TIANLI	3319
Tokai	3093,3167,3177
TOP TEC	3429
Toshiba	3013,3050,3102,3146,3147
	3160,3165,3229,3257,3430,3431
TSINGHUATONGFANG	3244,3245,3497
Umax	3169
UNIREX	3432

SETUP CODES FOR DVD

UNITRON	3429
Universum	3091
VCD2	3433
VICTOR	3235,3272,3291
VIFA	3238
VOX	3434
WANBAO	3484
WANYAN	3314,3334
WEGATANSS	3466
Wesder	3098,3171
Wharfedale	3096
XBox	3187
XIANPAI	3258
Yamaha	3093,3105,3415,3435
Yamakawa	3167,3177,3436
YMT	3491,3492
YOUBISHEN	3312
YUXING	3303,3344
Zenith	3012,3091,3108,3154
ZONDA	3437,3438
Others	3000,3001,3002,3004,3005,3006
	3007,3008,3009,3010,3011,3018,3019
	3020,3021,3022,3023,3024,3025,3026
	3027,3028,3030,3031,3042,3045,3046
	3051,3053,3054,3055,3056,3058,3060
	3061,3062,3063,3064,3067,3083,3195
	3204,3207,3294,3297,3298,3301,3310
	3311,3320,3321,3329,3332,3336,3345
	3346,3347,3348,3349,3350,3351,3352
	3353,3354,3355,3356,3357,3358,3359
	3360,3361,3362,3363,3364,3433,3449
	3468,3469,3474,3512,3514,3517,3518,3520

SETUP CODES FOR CD

Admiral	4057,4017,4058,4059,4060,4061,4179
Akai	4062,4177
ATLE	4015
B&O(Bang&Olufsen)	4063
Brunster	4064
Bush	4065
Carver	4067
Crown	4068
Daewoo	4069
Denon	4003,4070,4072,4073,4136,4162
Emerson	4151
Fisher	4002,4142
GoldStar/LG	4075,4154
Goodmans	4076
Grundig	4077,4080,4145
Haitai	4004
Harman/Kardon	4138,4159
Hitachi	4143
Inkel	4001
Jensen	4082
JVC	4022,4083,4084,4085,4139,4167
Karcher	4005
Kenwood	4006,4016,4074,4086,4087,4088
	4089,4090,4091,4092,4163,4170,4173
Lenco	4005
Luxor	4000
Magnavox	4008,4014,4021,4078,4136
Marantz	4096,4166
Matsui	4079,4095
Mcintosh	4081
Mission	4008,4097
NAD	4137
Nakamichi	4144,4147
Onkyo	4029,4030,4031,4032,4098
	4099,4100,4141,4171,4174
Optimus	4152
Panasonic	4101,4103,4104,4165,4169
Philips	4007,4008,4015,4021,4078,4093
Pioneer	4009,4010,4026,4105
	4106,4107,4108,4114,4171,4175
Proton	4008
Quadral	4109
Radiotone	4005
RCA	4110,4146,4149,4150
ROTEL	4008,4018,4019
SABA	4111
SAE	4008
Samsung	4112
Sansui	4020,4113,4147,4148,4168
Sanyo	4021,4115
Schneider	4130
Sharp	4006,4014,4132,4134,4172
Sherwood	4094,4116,4117
Sony	4010,4011,4012,4023,4055,4056,4071
	4155,4156,4157,4160,4161,4178
Sounde-sign	4133
Sylvania	4008,4021
T+A	4129
Teac	4024,4027,4124,4124,4164
Technics	4013,4025,4102,4119,4121,4131
Toshiba	4135,4153
Uher	4113,4122
Universum	4066,4124,4124,4125,4126,4127
Victor	4022
Wharfedale	4128
Wharfedale	4128
Yamaha	4028,4118,4120,4140,4158,4176
others	4033,4034,4035,4036,4037,4038
	4039,4040,4041,4042,4043,4044,4045,4046
	4047,4048,4049,4050,4051,4052,4053,4054

SETUP CODES FOR SAT

Tele+1	2762
Telecidl	2150
Telecom/televise	2707,2751,2821,2840
Telefunken	2403,2702,2739,2823
Teleka	2150,2386,2441
Telemaster	2143,2784
Telemax	2061,2549
Telemeister	2027,2038,2057,2059,2098,2116 2515,2526,2545,2547,2586,2604
Telesat	2145
Teleservice	2832
Telestarr	2408
Telesystem	2780,2818
Teletech	2142
Televise	2900,2902,2910
Televise	2141
Thomson	2149,2268,2305,2307,2308,2316 2317,2454,2471,2690,2691,2702 2739,2790,2832,2881,2888
Thorens	2815
ThomFerguson	2023,2024,2029,2030 2031,2062,2114,2511,2512 2517,2518,2519,2550,2602 2690,2691,2701,2702,2703,2721
TianChengDVB-T5	2965
TianJin	2984
TIF	2963
Tocom	2350,2351,2365
Tokai	2128
TongDa	2966
Tonna	2141,2390,2428
Tonna el.	2798,2880
Torx	2367
Toshiba	2071,2073,2151 2186,2559,2561,2639,2675
TPS	2158,2290,2445,2647,2811,2898
Trans	2147,2614,2635,2637
Trans px	2683
Triad	2391,2764,2765,2766
Triasat	2401,2408
Triax	2745,2746,2858
Tristar	2693
Tudi	2373
Ultravox	2707,2840
Unbranded	2110
Uniden	2032,2033,2035,2072,2183,2184 2438,2448,2520,2521,2523,2560,2672,2673 2705,2706,2711,2885,2886
Unisat	2395
United Cable	2367
United satellite	2069,2129,2557
Unitor	2733
Universum	2149,2418,2726,2778
US Electronics	2046,2534
Vtechnology	2766
Vector	2059,2116,2413,2547,2604,2765
Ventana	2385,2737,2744
Viewstar	2106,2594
Visiosa	2707,2714,2807,2836,2867,2884
Vortec	2088,2154,2208,2403,2741,2760,2761
Vortic star	2154,2643
Vtech	2063,2136,2391,2551,2837,2855
Watson	2240
Wela	2126
Wetekom	2145
Wevasat	2765
Winer	2016,2078,2130,2197,2566
Winarsat	2714
Wintergarten	2140
Wintermitz	2686,2688
Wisi	2038,2049,2064,2065,2066,2067,2068 2391,2399,2425,2526,2537,2552 2553,2554,2555,2556,2704,2726 2764,2769,2770,2804,2805,2878
Wiso	2132,2133,2620,2621
Woorisat	2143
Worldsat	2895,2911,2912,2913,2914 2915,2916,2917,2918,2919
Xocceo	2899
Xsat	2384,2466
Yes	2465
Yingshiong200c	2968
Zehnder	2019,2136,2143,2243,2249,2283 2285,2298,2302,2303,2314,2315,2415,2417 2444,2507,2717,2764,2856
Zenith	2070,2073,2074,2075,2076,2346 2347,2455,2558,2561,2562,2563,2564
Zhengzhou	2996
Zinwell	2174
Zodica	2150
Zwergnase	2439
Others	2173,2189,2214,2662,2921,2922,2923 2924,2925,2926,2927,2928,2929,2930,2931 2932,2933,2934,2935,2936,2937,2938,2939 2940,2941,2942,2943,2944,2945,2946,2947 2948,2949


SETUP CODES FOR DVD

Afreey	3097
Aierprince	3254,3255
Aiko	3367
Aiwa	3036,3114,3338,3368
Akai	3194
Akishi	3369
Akustic	3367,3446
Alba	3089,3173
Amoi	3299,3300,3302,3323
Aodelong	3504
Aone	3487
Apex	3081,3370
Atim	3037,3080
Audia	3486
Audiovox	3371
Avlight	3331
Bbk	3206,3209,3215,3216,3221,3236,3266 3279,3282,3287,3333,3475,3500
Bose	3131
Brocsonic	3151
Bulante	3252,3253
Bush(uk)	3089,3094,3098,3169
Caixing	3276,3283
Caravell	3034
Cat	3135
Cd video	3441,3442,3443,3444
Changhong	3324,3325,3326
Chestron	3134
Cineultra	3098
Classic	3372,3458,3459
Coby	3373
Conic	3082
Cyberhome	3129,3374
D.I.k	3136
Daewoo	3069,3174,3274,3275,3375 3376,3377,3378,3379,3380,3382 3383,3455,3467,3513
Dansai	3174
Dcs	3052
Decca	3174
Denca	3074
Denon	3105,3116,3184,3384
Denver	3098
Denzel	3093
Desay	3035,3214,3262,3305,3488
Diamond	3092
Digixmedia	3385
Dihe	3258,3265,3295,3505
Ding tian	3315
Divido	3172
Dual	3093
Dvd	3204,3207,3449
Elektra	3381,3386
Eita	3137
Encore	3097
Enzer	3093
F&d	3473
Ferguson	3088
Fisher	3421,3450
Funai	3156
Ge	3419
Gewang	3516
Giec	3277,3480,3482,3483 3484,3498,3510
Go video	3387,3388
Goldstar	3043,3091,3154,3176
Gpx	3389
Greenhill	3173
Grundig	3095,3125,3170,3172,3181
Gvg	3477,3478
Haier	3304
Haitai	3057
Haoji	3256
Harman	3099
Harman kardon	3117,3464
Himage	3313
Hisense	3322
Hitachi	3093
Hiter	3277
Huabaojamo	3132
Hyundai	3273
Idall	3316
Jaton	3167,3217,3249,3250,3251,3490
Jingewangpai	3219,3471
Jingwei	3199
Jmb	3095,3170
Jugao	3506
Jvc	3073,3106,3145,3178,3233 3339,3391,3463
Kardon	3099
Kenwood	3014,3040,3072,3128 3166,3184,3263,3392,3393,3394
Ketai	3218
Kiss	3093,3167
Kih	3109
Konka	3327,3395
Lafayette	3413
Lasonic	3396,3397
Lecson	3096
Legend-v	3059
Lenco	3098
Lg	3091,3177,3196
Linitron	3429
Logik	3078

Six-in-one Universal Remote Controller with LCD Display

 
ENGLISH

Please note the followings before using this remote controller:

- When serving the record button "●" in a VCR or DVD player, the record button "●" needs to be pressed for about 2 seconds.
- After turning on the Learn function of this remote controller, the Clock will stop working; have to readjust the Clock after exercising the Learn function.
- Learn keys: when serving the A/C, seven keys  can be used for Learning. When serving other home appliances, all the function keys for Learning.
- As for the Learn code and Key Transfer code, be sure to put the same key in the same storage area when serving the same home appliance, so that the codes will cover each other. When serving the same home appliance, the same key cannot store the Learn code and the Key Transfer code concurrently.
- During your use of the Menu, if you don't press any key within 2~3 minutes, the sys withdraw from the menu. If you don't press any key within 5~6 minutes, the LCD will be turned off.

Install the batteries

Open the battery trough cover, install three fire-new AAA batteries according to the +/- mark on the trough wall, as shown in the figure:

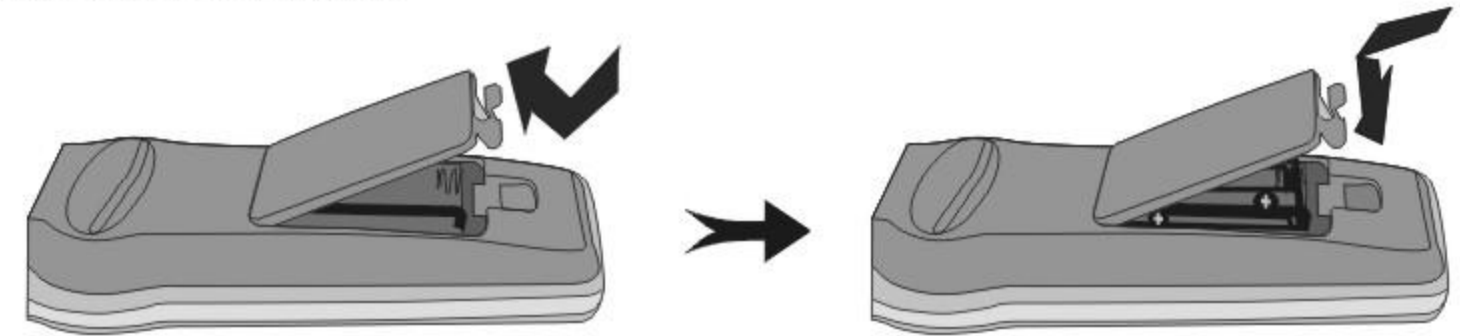


Precautions:



- Do not use new and old batteries or batteries of different models concurrently.
- In case of any liquid leakage from a battery, be sure to take the battery out, and clean the battery compartment trough before replacing it with a new battery.
- Be sure to take the batteries out before you are not going to use this remote controller for a long period of time.


6 kinds of operational interfaces

 There are six different equipment operation interfaces in this remote controller: TV, VCR, SAT, DVD, CD, and A/C (air conditioner). It is possible to directly press the equipment key to select.

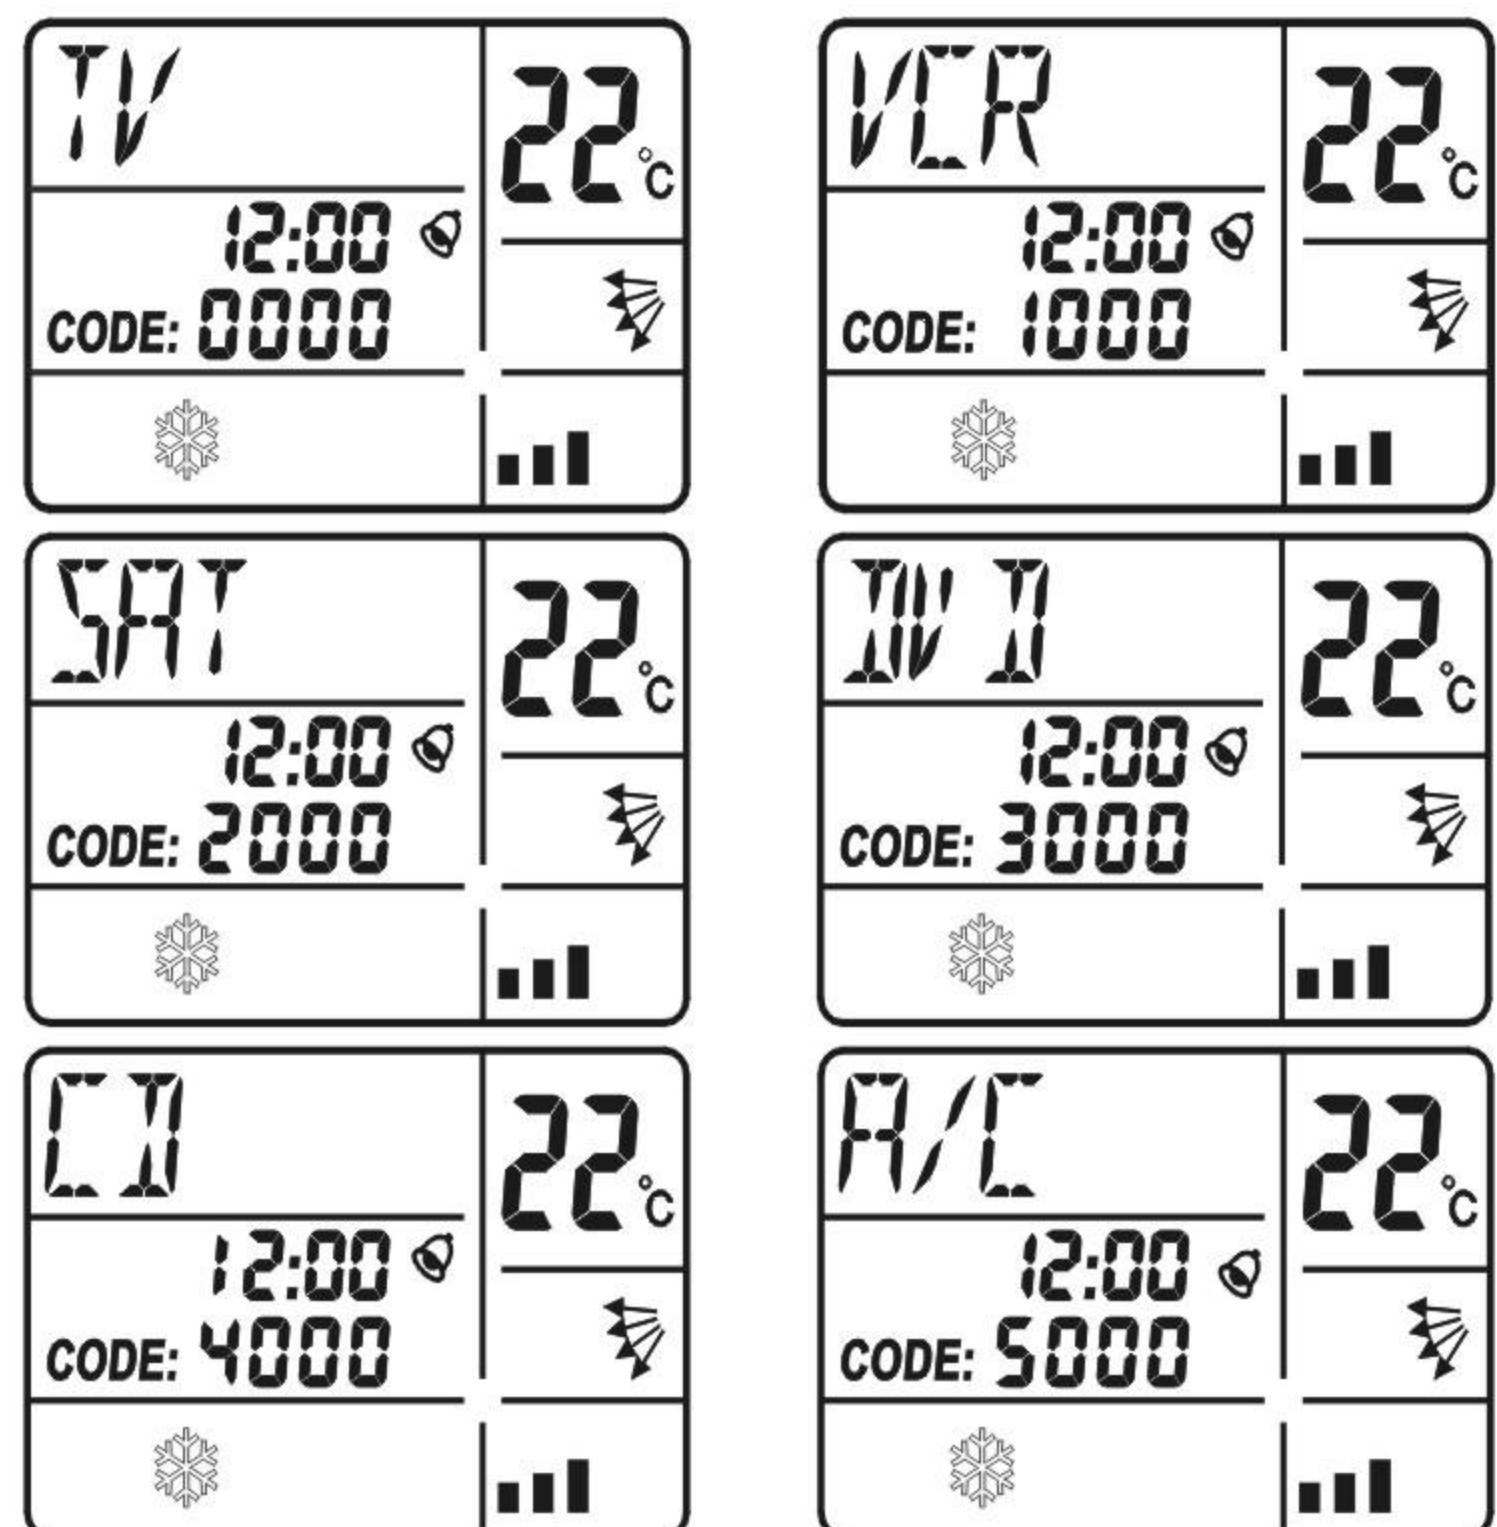

10 sub-menus that you can shift among

 Press the "SET" key for about 5 seconds, to enter the sub-menu settings. There are totally 10 sub-menus, press the "▶◀" or "↔" to shift among these sub-menus.

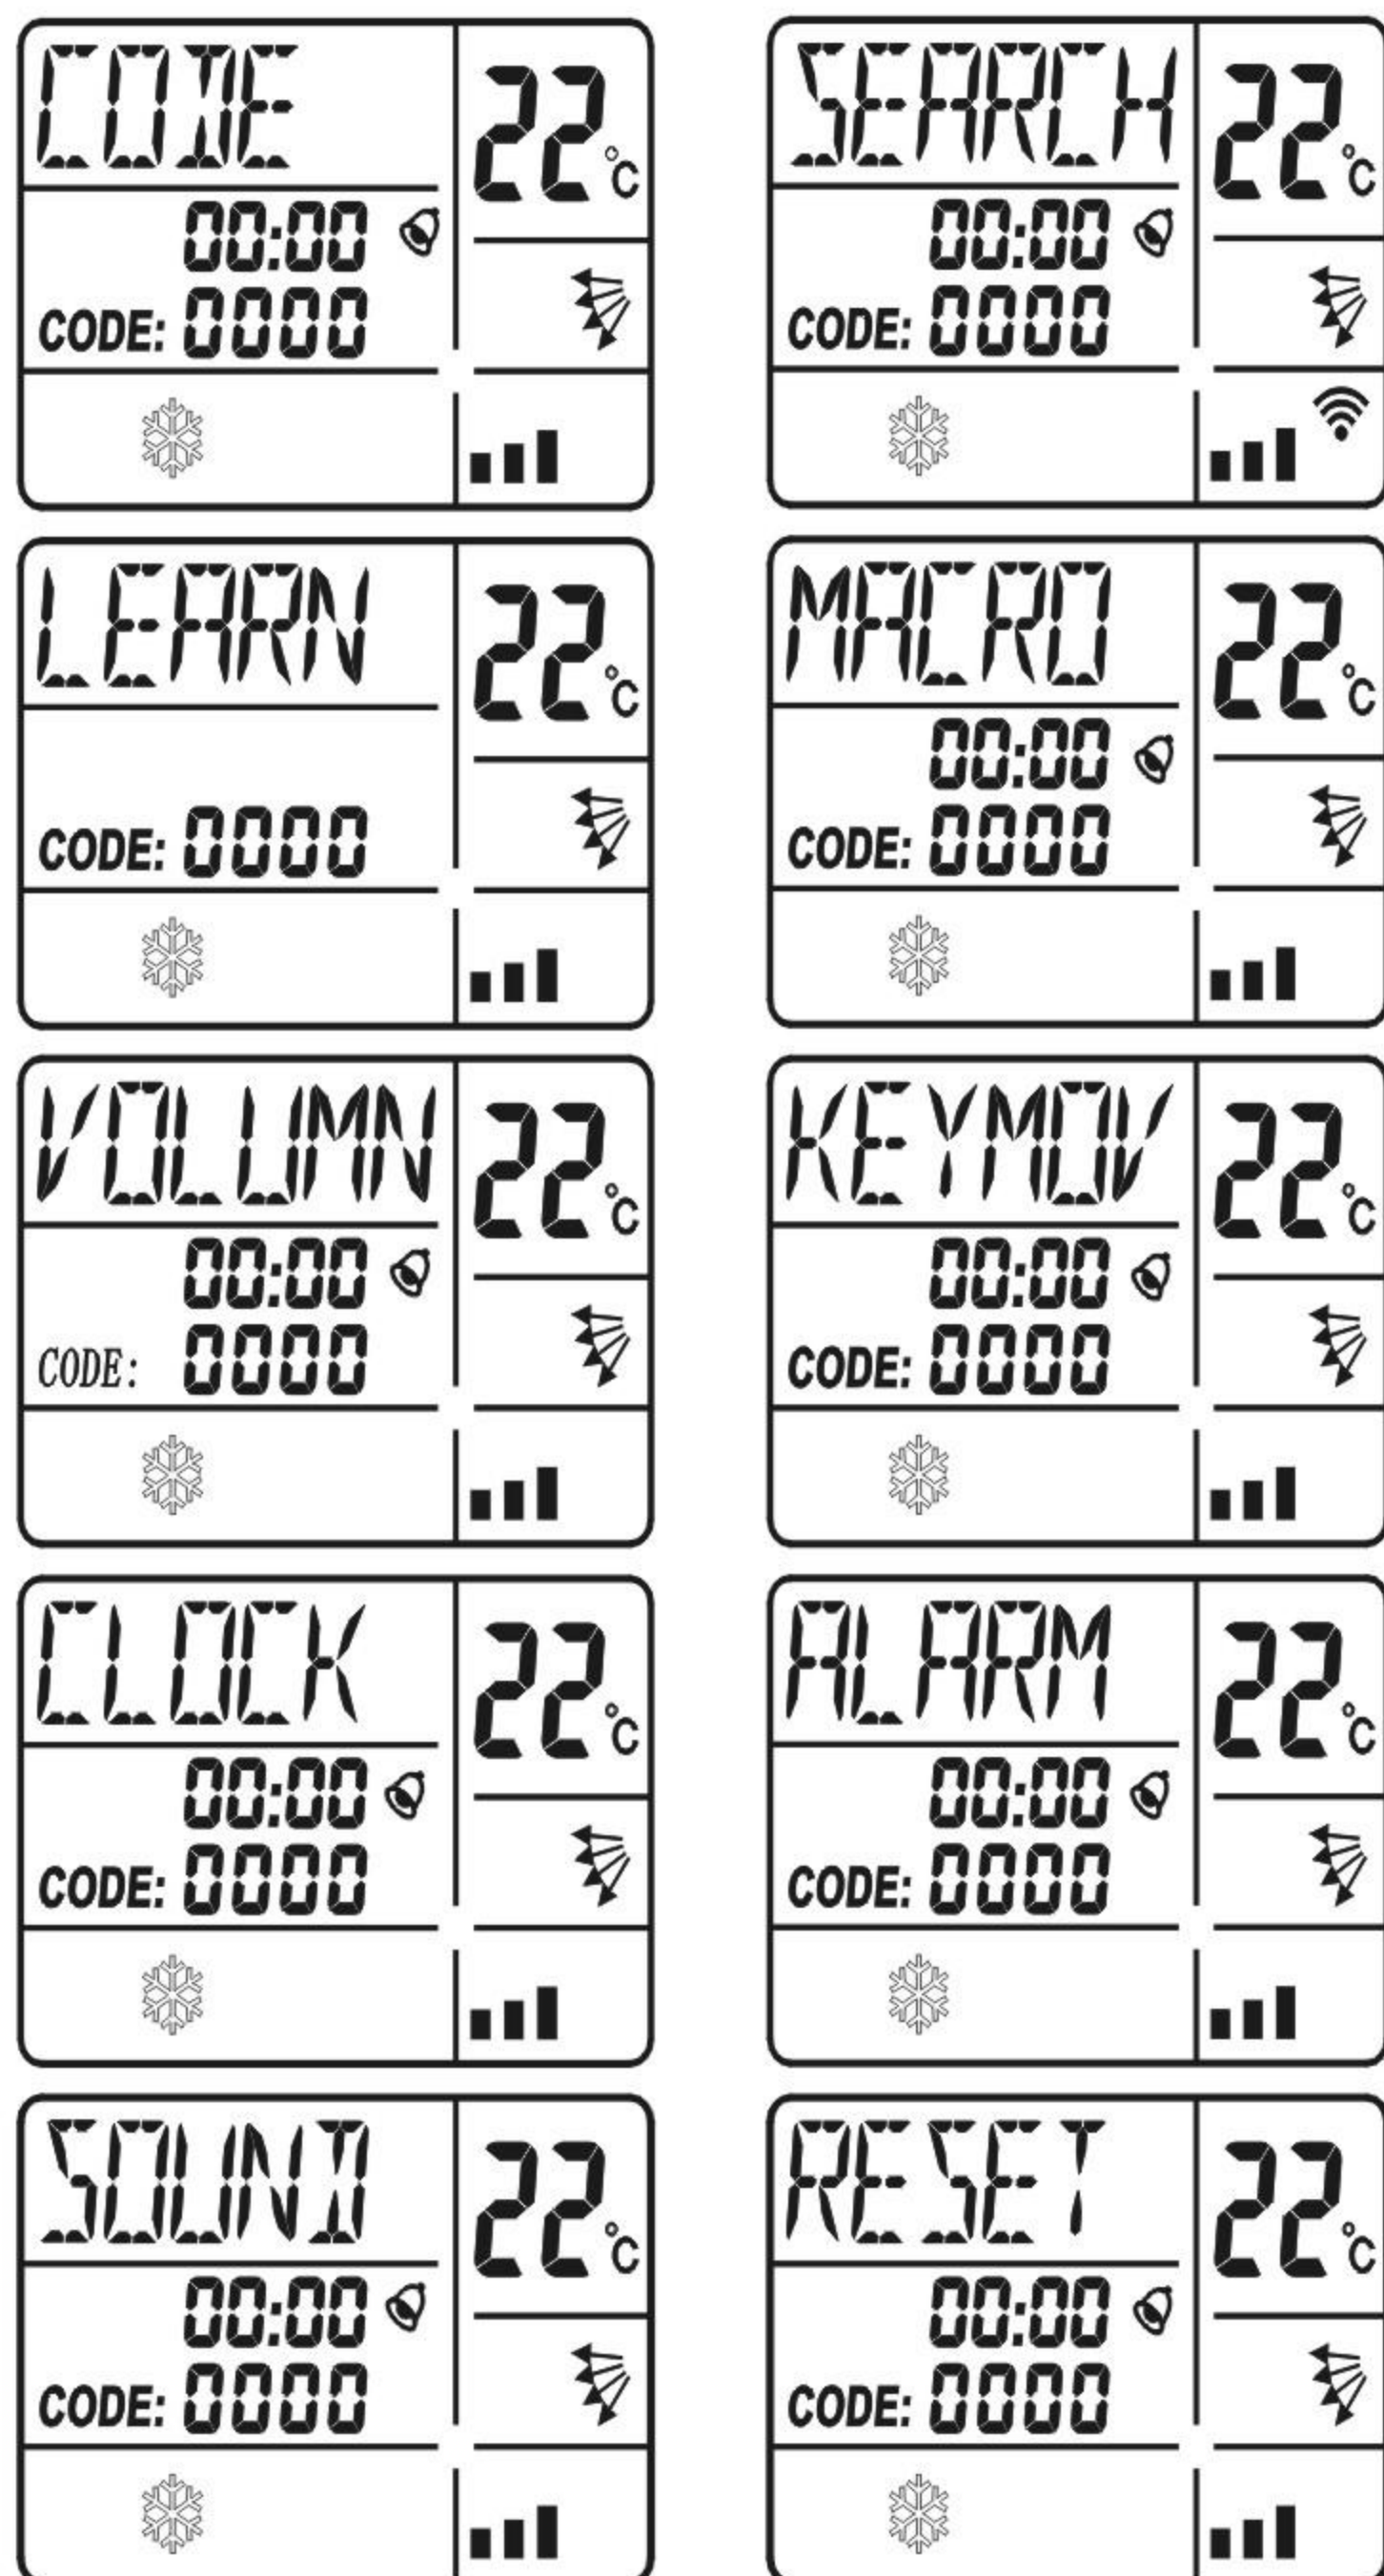

Settings on the remote controller

This remote controller can be set by three methods (A, B and C). You can opt for any one as you

Code range: TV 0000~0974 VCR 1000~1250 SAT 2000~2998
DVD 3000~3520 CD 4000~4179 A/C 5000~5319

A. Method of code entry

Find the brand of your home appliance to be controlled from the code list. Set for this brand from the first code, until you find the code for your home appliance. If all the codes cannot enable you to use the remote controller normally (or the brand of your home appliance is not in the code list), then go to use Method B or C.

SETUP CODES FOR SAT

Mitsubishi2118,2606,2726
Mnet2369,2375
Morgans2050,2126,2128,2135
.....2538,2760,2789,2827,2828
Morgan's2386,2411,2447,2475
Multichoice2460,2819,2869
Multistar2717
Murato2766
Myryad2385
Nanghai2990
Neahausat2818
NEC2051,2107,2122,2539,2595
.....2610,2723,2752,2846
Neckermann2538
Nekermann2050
Neosat2198
NET2023,2364,2511,2691
Neuhaus2149,2408
NEWLING2330
Nextwave2868
Nikko2135,2257,2430,2744,2814,2876
NOKIA2131,2160,2253,2273,2291,2309
.....2310,2378,2383,2400,2419,2432,2446,2459
.....2479,2480,2481,2482,2484,2486,2641,2649
Noos2379
Nordmende2393,2851
NTV plus2276
OAK2129,2617
OBRltech2055,2543
Oceanic2815
Octagon2150,2741
Okano2135,2717
Olympic2782
Onkyo2707,2714,2729,2776,2777,2818
Optex2737
Orava/otf2770
Orbit2741
Orbitech2408
Orient2722
Oxford2708,2823
Pace2023,2024,2029,2031,2114,2167,2168
.....2251,2252,2256,2294,2295,2380,2431,2437
.....2440,2452,2465,2478,2483,2511,2512,2517
.....2519,2602,2656,2657,2690,2691,2698,2702
.....2721,2739,2743,2762,2784,2793,2808,2824
.....2883,2893,2896,2901,2912
Pacific2815
Palcom2025,2513,2715,2755,2756,2850
Palladium2050,2135,2418,2538
Palsat2052,2408,2540,2693
Paltec2756
Panasat2172,2216,2422,2460,2661,2819
Panasonic2102,2301,2353,2354
.....2355,2452,2590,2674,2907
Panasonid2185
Panda2149
Pansat2084,2572
Paragon2159,2648
Patriot2412,2911
Phantom2823
Philips2031,2053,2054,2089,2106,2128
.....2136,2150,2156,2184,2194,2289,2311
.....2377,2381,2382,2385,2388,2418,2429
.....2435,2442,2454,2467,2477,2519,2541
.....2542,2594,2645,2672,2673,2702,2737
.....2738,2761,2762
Phoenix2395
Phonotrend2140,2387,2420,2436
Pioneer2103,2334,2348
.....2349,2454,2591,2762
Pixx2417
Planet2722
Polytron2398
Praxis2838
Preisner2126,2135,2411
Premier2155,2644,2662
Primestar2083
Primestat2571
Prosat2034,2080,2108,2140,2152,2387
.....2522,2568,2596,2692,2699,2768
Protek2815
Provision2143,2784
PSR2211
Ptt telecom2754
PVP Stereo Visual Matrix2367
Pyxis2448
Qak2361,2362,2363
Quadral2393,2414,2424,2768
QUADRAT2140,2152
Quadro2826
QUELLE2012,2149,2500
Radiola2128,2385
Radix2038,2057,2059,2116,2247,2260,2265
.....2287,2399,2463,2526,2545,2547,2604,2769
Rainbow2150
Rank/rbm2702
RCA2079,2171,2188,2567,2660,2677
RC-AK2085,2573
Redifusion2752
RFT2128,2140,2385,2387,2772
Ritar2688,2818
RM2213
Roadstar2818
Roch2729,2779

SETUP CODES FOR SAT

Rover2152
RTG2199
SABA2143,2149,2244,2245,2264,2269,2273
.....2282,2304,2319,2415,2429,2433,2464
.....2702,2757
Sagem2379,2445,2487,2794,2795
.....2796,2797,2811
Sakura2395,2514,2515,2698,2700
Salora2020,2047,2383,2508,2535,2688,2689
.....2704,2736,2747,2753,2802,2859,2860
Samsung2088,2104,2105,2154,2230,2320
.....2321,2576,2592,2593,2717,2760,2761
.....2764,2830
SAT2391,2406,2764
Sat 1002489
Sat 1012605
Sat partner2741,2766
Sat12967
SAT1002001,2117
SAT1RM30002969,2970,2971,2972,2973
.....2974,2975,2976,2977,2978,2979
Satcom2390,2741,2754,2809,2857
Satec2691,2702
Sateco2055,2543,2707,2741
Satellite2746
Satline2152
Satmaster2390
Satpartner2143,2150,2403,2409,2415,2433
Satstation2474
Schacke2150
Schneider2442,2780,2806,2889,2890
Schwaiger2398,2410,2417,2485,2691
Scientific Atlanta2081,2343,2344
.....2345,2368,2372,2569
Sedea2741
Seemann2135,2399,2769
SEG2145,2403,2413,2416,2434,2741
Seleco2141,2741,2818,2831
SET2178,2190,2191
.....2192,2667,2678,2679,2680
ShanDongZiBo2986,2987,2988,2992
ShangHai2995
ShenZhen2983
Siemens2012,2500,2726
Signal2085,2203,2208
Silva2766
Sintrack2056,2544
Skardin2174,2175,2852
Skr2818
SKY2452,2455,2465,2478
Sky Master2239,2241,2242,2318
Sky network2832,2920
Skydigital2233,2234
Skygiant2628,2629
Skylab2733
Skymaster2091,2108,2140,2142,2145,2152
.....2178,2180,2208,2233,2235,2236,2387,2414
.....2424,2430,2461,2596,2782
Skymax2128
Skyvision2141
SL2126
SM Electronic2430
SONY2101,2187,2237,2277
.....2292,2452,2589,2676,2762
Sskura2026,2027
SSTcom2145,2149
STAR2088,2099,2155,2199
.....2221,2224,2228,2587,2914
Stella2751
Stream2831
Strong2028,2052,2055,2109,2121,2143
.....2150,2217,2218,2221,2322,2323,2324
.....2458,2460,2476,2516,2540,2543,2597
.....2693,2762,2781,2784,2829,2870
STS2022,2510
STV2042,2530
STVI2402,2729
Sumida2135
Sun2773
Sun moon star2166,2655,2869,2897
Sunstar2126,2135,2411,2439
Super max2199,2201,2202,2203
Supernova2465
Supex2211,2215,2222
Sxhwaiger2145
TADA2077,2565,2640
Tadiran2170,2659
Sagra2141,2704
Saicom2619
Sandberg2737
Tantec2025,2513,2702,2715
Tay Shoen2146,2623,2634
Techniland2141,2390
Technisat2038,2057,2058,2059,2060,2116
.....2128,2254,2255,2270,2275,2280,2286,2300
.....2312,2313,2405,2408,2526,2545,2546,2547
.....2548,2604,2720,2746,2759,2761,2763,2769
Technosat2096,2155,2222
.....2584,2707,2806,2840
Technowelt2149
Teco2397
Tedalex2095,2583
Teknika2100,2588
Telasat2145

SETUP CODES FOR SAT

Dvb-2	2951
Dvb-3	2952
Dvb-ik05	2953
Dvb-ik06	2954
Dvb-ik07	2955
Dvb-ik08	2956
Dvb-ik09	2957
Dvb-ik10	2958
Dvb-ik11	2959
Dvb-ik12	2960
Dvb-rc03	2961
Dynasat	2120,2121,2608,2609
.....	2780,2791,2792,2845
Eastern	2137,2138,2139
.....	2624,2625,2626,2627
Echostar	2006,2007,2008,2015,2038,2040
.....	2041,2086,2087,2090,2091,2115,2153,2180
.....	2215,2399,2430,2454,2457,2494,2495,2496
.....	2503,2526,2528,2529,2574,2575,2577,2578
.....	2579,2603,2642,2669,2696,2704,2712,2713
.....	2715,2724,2728,2769,2787,2788,2803
Eh.galaxy	2211
Eif	2402
Einhell	2126,2135,2140
Elsat	2175
Electrosat	2223
Elekta	2143
Elsat	2686
Elta	2128,2141,2394,2707
Emanon	2403,2741
Emmeesse	2092,2093,2094,2580,2581
.....	2582,2740,2780,2782,2783
.....	2791,2792,2816,2820,2831
.....	2863,2865,2866
Eurieult	2729,2779
Eurodec/sagem	2794,2795,2796,2797,2798
Europa	2048
Eurosat	2135,2707
Eurosky	2050,2126,2135,2149,2538
Eurospace	2203
Eurostar	2094,2142,2149,2225
.....	2469,2470,2582,2825
Eutra	2441
Exator	2150
Fagorlife	2141
Fairmate	2864
Fait	2769,2780
Feecom	2403,2433
Fenner	2823,2872,2873
Fidelity	2694
Filmer	2375
Filmnet	2737
Finlux	2043,2044,2383,2400,2401
.....	2531,2532,2727,2732
Fm	2707,2840
Formenti	2698
Fortec star	2650,2651,2087,2161,2162,2199
.....	2203,2204,2205,2206,2207,2208,2209
.....	2210,2212,2219,2220,2229,2231,2232
Foxtel	2460
Fracarro	2009,2010,2457,2497,2498,2709
.....	2710,2714,2741,2780,2781,2829,2831
.....	2870,2881,2882
France telecom	2376
Freecom	2055,2543
Fte	2028,2456,2516,2693,2740
.....	2839,2840,2841
Fuba	2042,2399,2401,2402,2403,2530
.....	2704,2715,2726,2729,2733,2741
.....	2742,2756,2767,2769
Fushan	2991
Untach	2176,2177,2665,2666
.....	2689,2691
G sat	2140,2141,2246,2248,2250,2262
.....	2266,2267,2288,2306,2387,2394,2395
.....	2426,2443,2450,2456,2485,2707,2782
.....	2830,2840
Galaxys	2226,2834
Gardiner	2444
Glucarecord	2011,2045,2499,2533,2725
Gmi	2135,2144,2148,2616,2632,2636,2638
Gold box	2272,2762
Golden	2735
Goldstar	2766
Gooding	2418
Granada	2702
Grandin	2125,2451
Grothusen	2766
Grundig	2012,2029,2031,2033,2262,2263
.....	2271,2299,2418,2435,2442,2452,2500
.....	2517,2519,2601,2684,2685,2702,2726
.....	2819,2842,2854
Gsm-1600	2962
Guangxi	2997
Guangzhou	2982
Haerbin	2989
Hamiln/regal	2356,2357,2358,2359,2360
Hongkong	2980,2981
Hangzhou	2993
Hanseatic	2145
Hanuri	2143
Hebeineimenggu	2994

SETUP CODES FOR SAT

Heliocom	2149,2740
Hinari	2691,2768
Hirschmann	2044,2297,2399,2400,2408
.....	2409,2419,2441,2463,2532,2726,2732
.....	2761,2765,2904,2905,2906,2908,2909
Hitachi	2112,2181,2182,2600
.....	2670,2671,2702,2736
Houston	2428,2823
Hts	2180,2669
Huangshi	2964
Hughes	2181,2182,2670,2671
Humax	2134,2327,2456,2472
Huth	2050,2108,2135,2140,2141,2149,2386
.....	2387,2390,2394,2396,2439,2538,2596,2782
Hwalin	2169,2658
Hypervision	2377
Hypson	2729,2779
Hyundai	2279,2833
Icxinternational	2046,2534
leec	2623,2631,2682
Ikusi allsat	2396
Imperial	2722,2757,2919
Intertronic	2135,2877
Intervision	2141,2149,2152,2420
Invideo	2457
Italtel	2831
Itc	2818
Itt	2383
Itnokia	2013,2014,2047,2501,2502
.....	2535,2688,2702,2704,2732
.....	2736,2739,2747,2762,2774,2775
.....	2802,2812,2817,2818,2859,2860,2875
Jebsee	2613
Jeemon	2015,2513,2707
Jerrold/g.i	2046,2083,2274
.....	2335,2336,2337,2338,2339,2340
.....	2341,2342,2352,2365,2366,2367
.....	2371,2534,2571,2894
Johansson	2016,2141,2504,2714,2730
Jok	2429,2837
Jsr	2015,2394,2707,2840
Jvc	2412,2418
Kathrain	2017,2018,2019,2048
.....	2098,2128,2136,2150
Kathrein	2258,2278,2284,2384,2385,2391
.....	2398,2404,2407,2410,2423,2427,2473
.....	2505,2506,2507,2536,2586,2687,2717,2718
.....	2726,2771,2777,2780,2844,2903
Keywest	2439
Koka	2619,2622
Kosmos	2717,2766
Kr	2150
Kreiselmeier	2726
Kyostar	2150,2403
Laem sat	2840
Lasat	2126,2135,2143,2149,2411
.....	2415,2421,2789,2799,2800,2801
Lenco	2052,2055,2109,2110,2111,2397,2403
.....	2540,2543,2597,2598,2599,2741,2766
Leng	2714
Lennox	2420
Leon	2128,2616
Lexus	2128
Lifesat	2145
Linyi	2985
Livesat	2822
Loeweopta	2135
Llorenzen	2149
Luxor	2013,2020,2021,2383,2419,2501,2508
.....	2509,2688,2689,2704,2727,2736,2748,2749
.....	2891
Lyonnaise	2891
M&b	2145
M.net	2733,2813
Macab	2049,2453,2462,2537,2843
Macom	2073,2561
Maestro	2895
Magnavox	2106,2183,2184,2594,2672,2673
Manhattan	2141,2143,2415,2420
.....	2474,2702,2707,2784
Marantz	2128,2385,2737
Maspro	2017,2022,2031,2119,2435,2505
.....	2510,2519,2607,2687,2702,2716,2719,2861
Mataw	2717,2735
Matsui	2261,2418
Max	2149
Maxtronics	2329
Mb	2145
Mediabox	2762
Mediamarkt	2135,2386
Mediasat	2454,2762
Mega	2128,2737
Memphis	2395,2697,2700
Metronic	2125,2135,2136,2140,2143,2150
.....	2430,2741,2781,2784,2785,2870,2871,2874
Metz	2012,2500,2726
Microsat	2227
Micro technology	2416,2765
Micronax	2328
Micronik	2468
Mimtec	2853
Mina	2123,2611
Minerva	2012,2029,2113,2418
.....	2500,2517,2601
Misc	2879

Six-in-one Universal Remote Controller with LCD Display

 
ENGLISH

1. Manually turn on the home appliance you are going to take remote control of, find the first code for your home appliance from the code list. For example: the DVD is branded SONY, the first code is 3017.



2. Press DVD key once to switch to DVD interface.


3. Press the "SET" key for about 5 seconds, to enter the sub-menu "CODE" state.

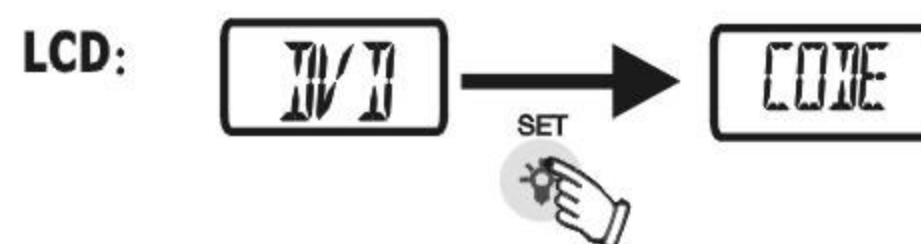

4. Press the "OK" key, to enter the settings state.



 5. Enter four figure code 3017. It will return to the sub menu of "CODE" when the input is correct and "BI" is heard. Press key "exit" to exit and save the setting. Check whether or not all other keys (except equipment key and SET key) are valid. If yes, the setting is completed; if not, repeat Steps 4~5. (Sound "BI-BI-BI-BI" can be heard if the code input is wrong. Reenter again.)

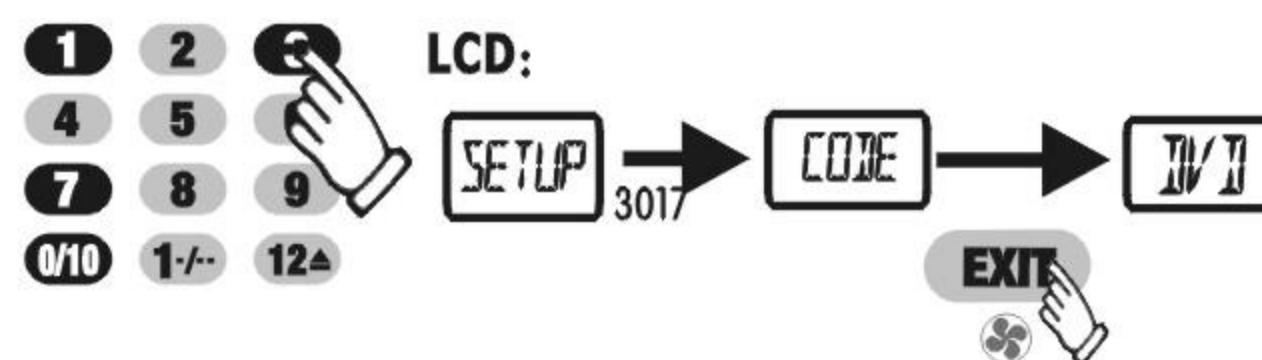

B. Method of manual search of code

 
1. Manually turn on the home appliance you are going to take remote control of (e.g. TV or VCR, etc.), aim the remote controller at the home appliance that has been turned on. For example: to do settings on the TV.




2. Press key TV once to switch to "TV" interface.



3. Press the "SET" key for about 5 seconds, enter the sub-menu "CODE" state; then press the "SEARCH" key to show "SEARCH", then press the "OK" key, the "MANUAL" will blink.

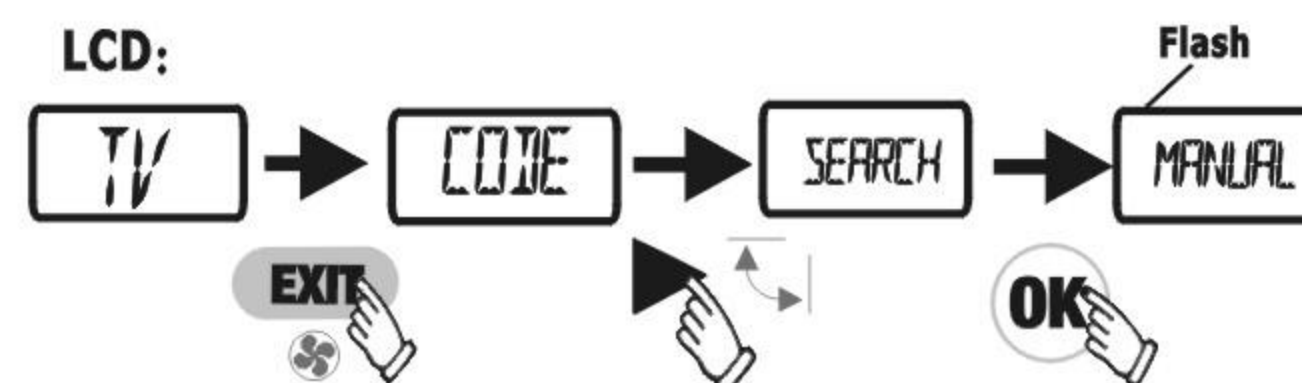

 4. Press the "OK" key for once, the "Code" will blink.

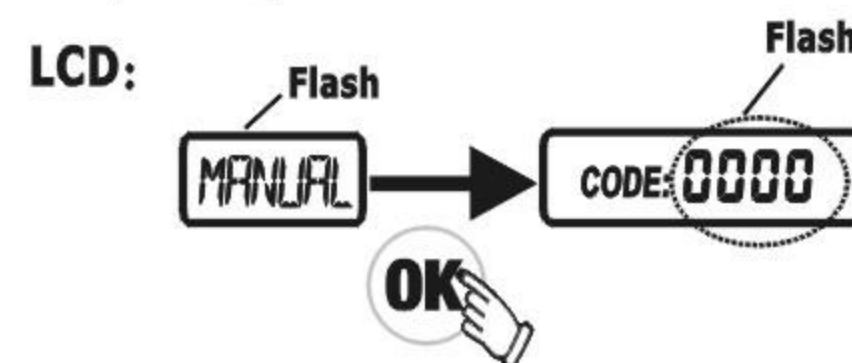


5. Aim the remote controller at the TV set, click the "TEMP" key, until the screen of the TV set shows the "VOLUME" mark. Press the "OK" key to return to the "MANUAL" state.



Remarks: except for that A/C (air-conditioner) shows Turned On, other home appliances all show the "Volume" mark. Therefore, when doing the settings, be sure to turn on the power of A/C (air-conditioner), and make it remain in the Stand-by state. Other home appliances shall remain in the Normal Play state.

 6. Check whether or not other keys are valid, ("TEMP", "exit", SET, equipment key, confirm key excepted). If yes, press "exit" once to return to "SEARCH" menu and press "exit" again to exit. The setting is completed. If not, repeat Steps 4~6.

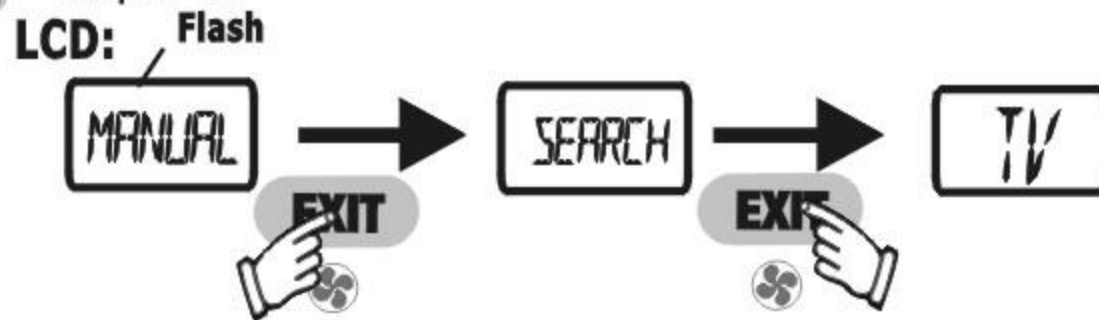


C. Fully automated search of code


1. Manually turn on the home appliance that you are going to take remote control of (e.g. TV, VCR etc.), aim the remote controller at your home appliance that has been turned on. For example: do settings on the TV.



 
2. Press key TV once to switch to "TV" interface.

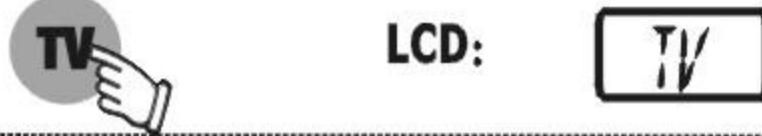

 
3. Press the "SET" key for about 5 seconds, enter the sub-menu "CODE" state, then press the "▶◀" key to set the menu screen at "SEARCH", then press the "OK" key, the "MANUAL" will blink.

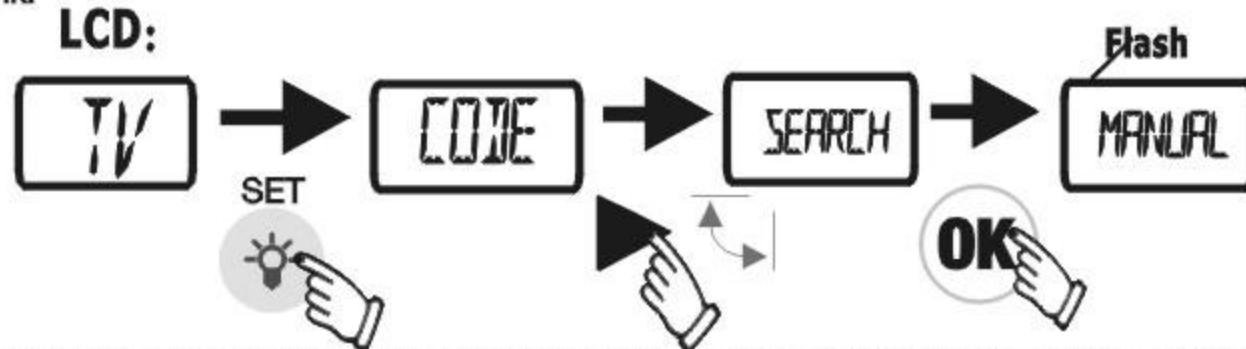

 4. Press the "TEMP" key for once, the screen will show "AUTO".

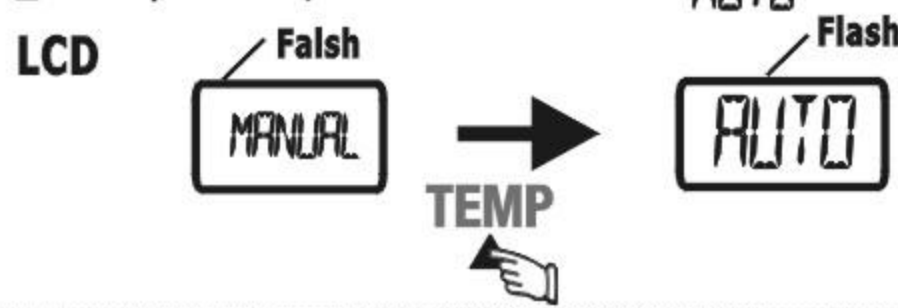

 5. Press the "OK" key for once, the system enters the Fully Automated Search state.

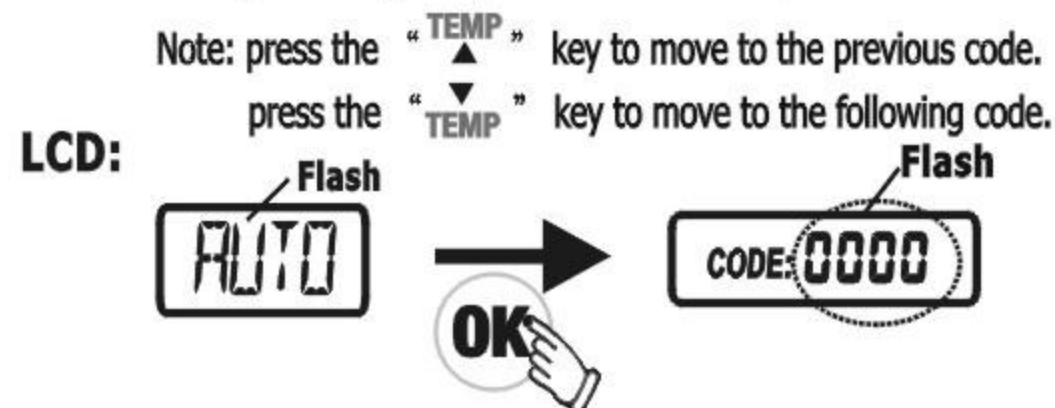

6. When the home appliance that you take remote control of is turned off, press the "OK" key immediately to stick to the code of this home appliance (remarks: TV and SAT will show Turned Off, and A/C (air-conditioner) will show Turned On. VCR, DVD and CD will show Play. If the VCR or DVD or CD shows Automatic Play, then turn it off manually, the system will go into the Standby state.)



SETUP CODES FOR VCR

Rex	1004,1023,1050,1188,1239
Rft	1240
Roadstar	1110,1126,1186,1199,1220,1222
Royal_lux	1111
Saba	1001,1004,1010,1023,1026,1049
.....	1050,1052,1057,1068,1069,1141,1142
.....	1165,1166,1188,1214,1229,1230,1239,1245
Saisho	1017,1018,1053,1112,1063,1091
.....	1179,1185,1201,1215,1216
Salora	1014,1016,1045,1154,1190,1192,1205
Samsung	1020,1167,1168,1169,1170
.....	1171,1220,1241
Sansui	1051,1111,1112,1188,1198
Sanwa	1108
Sanyo	1022,1045,1047,1070,1131,1172
.....	1192,1203
Saville	1109,1237
Sbr	1200,1207
Schaub_lorenz	1107,1178,1188,1203
Schneider	1009,1012,1020,1107,1110
.....	1133,1145,1173,1178,1199,1200
Sears	1046
Seg	1012,1020,1111,1220,1231
Sei	1179,1200
Sei-sinudyne	1108
Seleco	1040,1110,1126,1127,1188
.....	1214,1218,1221,1238
Senta	1008
Sentra	1181
Sharp	1032,1033,1072,1110,1154,1185
.....	1194,1197,1202,1209,1225
Shintom	1199,1203
Shinton	1087
Shiva	1110
Shorai	1179
Siemens	1003,1006,1022,1100,1131,1173
.....	1186,1196,1200,1203,1207,1213
Silva	1186
Singer	1191
Sinudyne	1009,1018,1179,1200
Solavox	1181
Sonorol	1192,1197
Sontec	1110,1186
Sony	1029,1030,1071,1073,1074
.....	1075,1098,1102,1113,1114,1115
.....	1116,1117,1118,1119,1120,1121
.....	1122,1123,1182,1183,1184,1247
Soundwave	1110
Starlite	1110
Sunkai	1112,1236
Sunstar	1107,1178
Suntronic	1107,1178
Supra	1110
Symphonic	1107
Taisho	1108
Tandberg	1053,1138
Tandy	1178,1203
Tashiko	1107,1110,1178
Tatung	1009,1112,1107,1109
.....	1178,1188,1200
Teac	1107,1110,1178,1222,1227,1240
Tec	1181
Technics	1210,1218
Technisat	1112
Teleavia	1188,1244
Telefunken	1001,1004,1010,1023,1049,1050
.....	1052,1054,1061,1076,1077,1078,1166,1174
.....	1188,1212,1229,1230,1239,1244,1245,1246
Telemeistar	1090
Teletech	1111,1107
Tenosai	1199
Tensai	1111,1107,1108,1110,1178,1231
Tevion	1112
Thom	1131,1144
Thomson	1001,1004,1010,1023
.....	1049,1054,1055,1059,1188,1198
.....	1229,1230,1239,1244,1245
Thom	1185,1188,1203
Thom-ferguson	1001,1004,1031
.....	1034,1035,1036,1050,1037,1039
.....	1060,1061,1079,1099,1110
Tmk	1017
Tokai	1110
Topline	1112
Toshiba	1004,1023,1038,1175
.....	1176,1188,1190,1191,1200,1239
Towada	1111,1231
Triumph	1215
Uher	1004,1020,1110,1220
Ultravox	1007
Universum	1111,1112,1107,1110,1144,1145
.....	1159,1178,1186,1200,1205,1213,1220,1232
Vector	1044
Victor	1049,1059,1097
Video	1044
Videomagic	1186
Villain	1178
W.w.house	1144
Watson	1109,1164,1177
Weltblick	1110
White_westinghouse	1007,1013
Xenon	1053
Yamishi	1199
Yokan	1199
Yoko	1110,1181,1220

SETUP CODES FOR SAT

Ab	2165,2654
Abc	2081,2569
Absat	2384,2449,2810
Adb	2296
Aegir	2143
Aeon	2619
Agasgi	2524,2699,2722,2757
.....	2768,2789,2818
Akal	2412
Alba	2036,2150,2392,2403,2412
Aldes	2143,2387,2782,2784,2785,2786,2140
Alfa gold	2163,2164,2652,2653
All vision	2325,2326
Allsat	2128,2141,2707,2737
Allsonic	2140,2782
Alphasat	2668
Alphastar	2128,2179
Amstar	2200
Amstrad	2000,2001,2037,2117,2126,2135
.....	2238,2259,2260,2281,2293,2389,2406
.....	2408,2452,2488,2489,2525,2605,2686
.....	2694,2754,2760,2767,2847,2849,2892
Amstrong	2128
Ankaro	2002,2140,2387,2414,2430
.....	2490,2733,2835
Ansa	2663,2664
Antron	2150,2403,2741
Apo	2633
Apollo	2031,2519
Arcon	2396,2740,2760
Armstrong	2386
Asat	2128,2397
Asiagiant	2130,2618,2630
Ast	2391,2688,2764
Aston	2127,2707,2840,2887
Astra	2001,2037,2038,2135,2149
.....	2383,2397,2413,2416,2489,2526
.....	2605,2687,2688,2845
Astro	2134,2143,2150,2392,2408
.....	2415,2718,2726
Astrx	2193,2195,2196,2199,2681
Audio yon	2394
Audioton	2141,2150
Aura	2059,2116,2547,2604
Auriga	2739,2784
Avalon	2399
Axis	2395
Barcom	2002,2490,2733
Benjamin	2097,2585
Best	2082,2570,2615,2733
Birmingham cable communications	2371
Blaupunkt	2726
Boca	2126,2135,2386,2411,2447
Brain wave	2714
British sky broadcasting	2452,2478
British telecom	2367
Brunor	2734
Bruns	2782
Bskyb	2233,2234
Bt	2412,2428,2429
Bush(uk)	2031,2519,2702,2722,2757
Cabletime	2370
Cambridge	2004,2412,2492,2708,2758,2848
Canal digital	2454
Canal satellite	2454,2646,2762,2906
Canal+	2157,2242,2277,2454
Cci	2765
Changhong	2998
Channel master	2393,2768
Chaparra	12003,2039
Chapprral	2491,2527,2697
Cherokee	2895,2911,2912,2913,2914
.....	2915,2916,2917,2918,2919
Citycom	2136,2398,2444,2776,2777,2780
Cmr	2818,2837,2862
Cnt	2143,2415
Columbus	2715
Commilink	2140,2387
Comtec	2140
Condor	2149
Connexion cx	2731,2750,2769
Connexions	2399,2405
Conrad	2149,2421
Contec	2395
Cosat	2141
Crown	2135,2386
Cyrus	2385
Daewoo	2397,2818
D-box	2432,2459,2486
Ddc	2393,2768
Decsat	2374
Dgtec	2331,2332,2333
Digitrona	2725
Direc tv	2382
Disistrat	2737
Disk express	2733,2757
Distratel	2464
Distrisat	2128
Dnt	2038,2057,2116,2128,2385,2399
.....	2405,2526,2545,2547,2604,2744
Donatec	2733
Drake	2005,2074,2075,2076,2124,2493
.....	2562,2563,2564,2612,2695,2783
Dvb-1	2950

SETUP CODES FOR VCR

Akai	1000
Adel sound	1108
Aiwa	1112, 1107, 1109, 1110, 1124
	1125, 1126, 1178, 1227, 1236, 1237
Akai	1001, 1002, 1040, 1041, 1087
	1088, 1109, 1129, 1188, 1195
	1205, 1223, 1228
Akiba	1199
Alba	1112, 1107, 1109, 1130, 1181
	1199, 1216, 1222, 1224, 1226
	1228, 1234, 1235, 1237
Allsar	1111
Ambassador	1181
Amstrad	1107, 1178, 1232, 1233
Anitech	1111, 1199
Anitsch	1042
Ansonic	1108
ASA	1013, 1110, 1186, 1200
Asuka	1107, 1110, 1186
AWA	1110
Baird	1002, 1004, 1107, 1131, 1132
	1178, 1188, 1203, 1206
Basic Line	1181, 1199, 1222
Blaupunkt	1003, 1005, 1006, 1043, 1100
	1133, 1184, 1208, 1210, 1213
	1218, 1219, 1240
Bluesky	1112, 1109, 1110
Brandt	1212, 1229, 1230, 1244
Brandt Elctronic	1188
Brinkmann	1112
Brionvega	1007, 1014
Bush	1012, 1112, 1107, 1109
	1199, 1216, 1222, 1224, 1234, 1235, 1237
Casio	1107
Catron	1181
CGE	1001, 1008, 1107, 1178
CGM	1022, 1126, 1135, 1136, 1137
Cimline	1199
Clatronic	1181
Cmobitech	1237
Combitech	1109
Condor	1181
Crown	1111, 1181, 1199, 1222
Cyrus	1200
Daewoo	1109, 1138, 1139, 1181, 1222
Dansai	1012, 1199
De Graaf	1189, 1211
Decca	1009, 1112, 1107, 1178, 1200
Denon	1189
Diamant	1110
Dual	1004, 1010, 1107, 1188
Dumont	1107, 1178, 1200, 1203, 1204
Elbe	1044, 1187
Elcatech	1199
Emerson	1017
ESC	1220, 1222
Ferguson	1107, 1140, 1141, 1142
	1188, 1206, 1229, 1230, 1244
Fidelity	1107, 1178
Finlandia	1200, 1203
Finlandia	1107
Finlux	1009, 1107, 1178, 1189, 1200, 1203, 1204
Firslite	1186, 1190, 1191, 1199, 1216
Fisher	1011, 1045, 1046, 1047
	1192, 1193, 1196, 1203
Fristline	1112, 1110
Frontech	1111, 1181
Fujitsu	1107, 1178
Funai	1090, 1107, 1143, 1178
Galaxis	1107
GBC	1012
GEC	1009, 1200
Geloso	1012
General	1089, 1181
General Technic	1112
Goldhand	1199
Goldstar	1013, 1107, 1110, 1186, 1217
GoldStar/LG	1135, 1144
Goodmans	1032, 1112, 1107, 1110, 1138, 1145
	1178, 1181, 1186, 1197, 1199, 1222, 1240
Graetz	1188, 1203, 1220
Granada	1003, 1009, 1014, 1045
	1100, 1107, 1110, 1192, 1200, 1203, 1223
Grandin	1107, 1110, 1178, 1186, 1199
Grundig	1003, 1006, 1015, 1112
	1092, 1100, 1133, 1136, 1146, 1199, 1200, 1213
	1218, 1224, 1240, 1249, 1250
Hanimex	1109
Hanseatic	1009, 1016, 1110, 1186
HCM	1111, 1199, 1224
Hinari	1012, 1017, 1018, 1111, 1048, 1091, 1108
	1179, 1199, 1215, 1220, 1224, 1237
Hitachi	1004, 1012, 1016, 1019
	1107, 1108, 1126, 1147, 1148, 1149, 1178, 1179
	1188, 1189, 1204, 1211, 1220, 1223
Hypson	1109, 1199
Imperial	1008, 1020, 1107, 1178
Ingersol	1179
Ingersoll	1108
Inno Hit	1111
Interfunk	1009, 1021, 1200
Intervbuy	1110
Intervision	1112, 1107, 1110


SETUP CODES FOR VCR

Irradio	1110
ITT	1188, 1192, 1203, 1205, 1220, 1239
ITT-Nokia	1001, 1004, 1007, 1021
	1022, 1023, 1047, 1131
ITV	1110, 1181, 1186, 1222
JVC	1001, 1004, 1023, 1049, 1050
	1051, 1052, 1059, 1134, 1150, 1151
	1152, 1180, 1188, 1198, 1214, 1239
Kaisui	1199
Kendo	1112, 1110, 1144, 1205, 1216
Kenwood	1188
Kneissel	1112, 1109, 1110
Korpel	1199
Lenco	1056, 1086, 1222
Leyco	1199
LG	1107, 1110
Lifetec	1112
Loewe Opta	1003, 1053, 1100, 1108, 1110
	1144, 1145, 1153, 1179, 1186
	1200, 1210, 1242
Logik	1179, 1220
Luma	1053
Luxor	1016, 1022, 1154, 1190
	1192, 1194, 1197, 1203, 1205
M electronic	1178, 1187
Magnasonic	1022
Manesth	1191, 1199
Marantz	1003, 1009, 1032, 1197
	1200, 1207, 1226
Marguant	1111
Matsui	1018, 1053, 1112, 1063, 1107
	1108, 1109, 1110, 1135, 1155, 1179
	1185, 1201, 1215, 1216, 1226, 1236, 1237
Matsushita	1248
Medion	1112, 1109, 1236
Meletronic	1107, 1110
Memorex	1013, 1045, 1107, 1110, 1178
	1186, 1192, 1203
Memphis	1199
Metz	1003, 1006, 1025, 1100, 1101
	1186, 1210, 1213, 1219, 1242, 1249
Micromay	1112
Migros	1107
Minerva	1003, 1006, 1100, 1213
Mitsubishi	1009, 1012, 1024, 1051
	1093, 1103, 1156, 1157, 1190, 1198, 1200
Multitech	1012, 1111, 1056, 1107, 1178, 1199
Myriad	1200
NAD	1094, 1203
NEC	1004, 1044, 1051, 1110, 1187, 1188, 1198
	1203
Nechermann	1001, 1003, 1004, 1009
	1016, 1017, 1100, 1200
Nesco	1107, 1109, 1199
Noblisko	1003, 1100
Nokia	1131, 1154, 1188, 1192, 1203, 1205, 1220
Nokia Oceanic	1154
Nordmende	1001, 1004, 1010, 1023, 1026
	1027, 1028, 1049, 1050, 1052, 1054, 1055, 1057
	1058, 1059, 1060, 1061, 1141, 1142, 1188, 1229
	1230, 1239, 1245
Oceanic(F)	1107, 1178, 1188
Okano	1111, 1112, 1128, 1155, 1158, 1228, 1236
Optimus	1248
Orion	1017, 1053, 1112, 1062, 1063, 1064, 1091
	1108, 1109, 1159, 1179, 1185, 1201, 1215
	1216, 1226, 1234, 1235, 1236, 1237
Orson	1107
Osaki	1013, 1107
Others	1081, 1082, 1083, 1084, 1110
Otto Versand	1009, 1016, 1200
Palladium	1002, 1087, 1108, 1110, 1186
	1188, 1199
Palsonic	1107
Panasonic/National	1005, 1021, 1043, 1085
	1160, 1161, 1210, 1218, 1219, 1242, 1248
Pathe Marconi	1188
Pathe Cinema	1108, 1185
Penney	1044
Pentax	1017, 1189, 1204
Perdio	1107, 1178
Philco	1187
Philips	1009, 1033, 1065, 1066, 1067
	1100, 1133, 1145, 1162, 1163, 1164
	1200, 1207, 1239, 1240, 1243
Phonola	1009, 1066, 1136, 1145, 1164, 1200
Pilot	1104, 1105, 1106
Pioneer	1009, 1051, 1065, 1067, 1094
	1095, 1096, 1198, 1200
Portland	1181
Prinz	1107
Profex	1111, 1231
Profitronic	1220
Proline	1107, 1178, 1224
Prosonic	1107
PYE	1051, 1200
Quartz	1045, 1192
Quasar	1248
Quelle	1003, 1006, 1009, 1017, 1029, 1100, 1200
Radialva	1110
Radiola	1200
RCA	1080
Reoc	1236

Six-in-one Universal Remote Controller with LCD Display

ENGLISH

 
7. Check whether or not other keys are valid, ("TEMP", "EXIT", "SET", equipment key, OK key excepted). If yes, press "exit" once to return to "SEARCH" menu and press "exit" again to exit. The setting is completed. If not, repeat Steps 5-7.

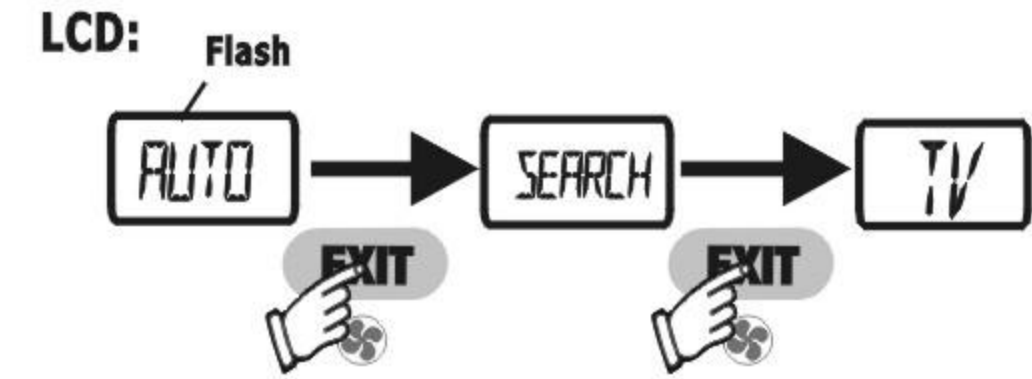

Learning function

This remote controller can learn the ones of various kinds of household electrical appliances with infrared control function in any interface. Eg. TV, VCR, and A/C, etc. When a interface is set, all the other keys have the learning function on the remote controller (equipment key and "SET" key excepted).

 
1. Aim horizontally the remote controller to be learnt at the signal window of this remote controller within a distance between 3~5 CM.

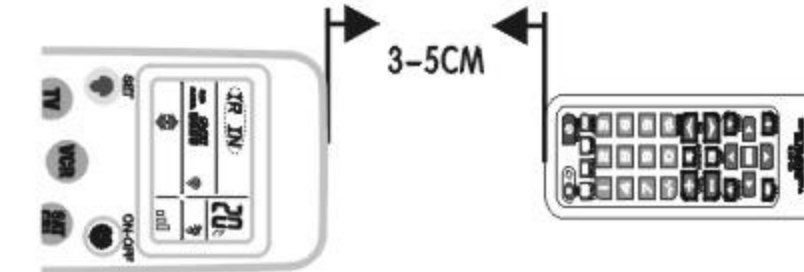


2. Press the "SET" key for about 5 seconds, enter the sub-menu "CODE" state, then press the "TV" key to set the menu at the "LEARN" state.



 
3. Press the "OK" key, the "L-ST" will blink; then press the "OK" key to enter the learning state, the "IR IN" will blink.

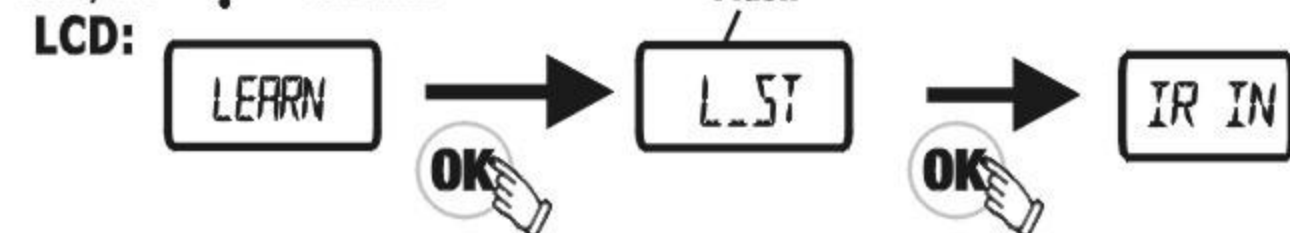

 
4. Press once the corresponding key to switch to the interface of the household electrical appliance to be learnt from (e. g., when setting TV, press key TV to switch to the interface of "TV".)

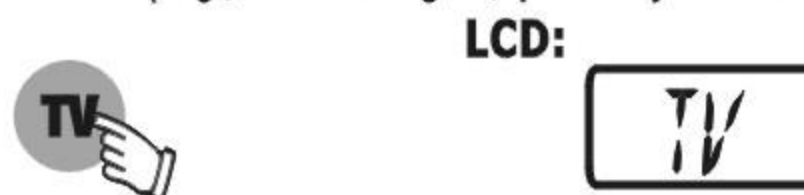

 5. Press a certain function key on the target remote controller to send out its code, until the "IR IN" stops blinking, then loosen the key, it means the Code Sending Instruction of this function key has been learned.

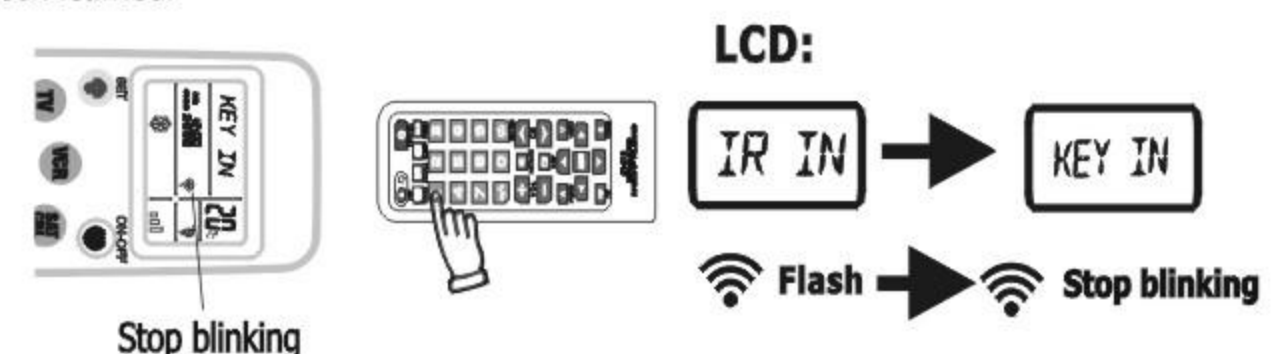

 6. Press the corresponding key to be learnt from on this remote controller, "IR IN" will flicker again. Now other keys of the remote controller to be learnt from have been learnt to that key. Learn each key gradually in the same way till all keys have been learnt. Press key "SET" once to exit the learning mode. Press again key "exit" to return to the interface of "TV".

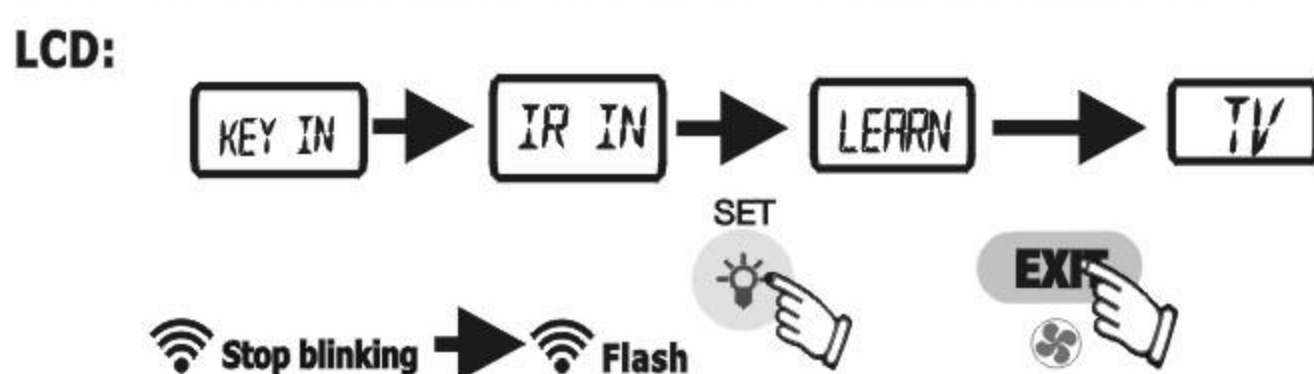

Remarks: Cancel the learned function

 
 
E.g. Cancel the learnt TV interface

Press the "SET" key to shift to the TV interface, → press the "SET" key for about 5 seconds to enter the Settings state → press the "▶◀" key to shift to the "LEARN" state → press the "OK" key to enter → press the "TEMP" to shift to the "LEARN" state. Press the "OK" key to the "LEARN" state → press the Key whose function has been learnt for once, the "K" in [LEARN] will blink for once, which means this key is cancelled. Repeat doing so to cancel the information that you want to cancel → press the "SET" key to withdraw and return to the "LEARN" menu, press the "EXIT" key for once, to return to the TV interface.

Other functions**1. Time Clock function and Restore Factory Settings function**

On the TV, VCR, DVD, CD, SAT and A/C pages, you can do the followings:

1. Press the "SET" key for about 5 seconds to enter the Setting mode;

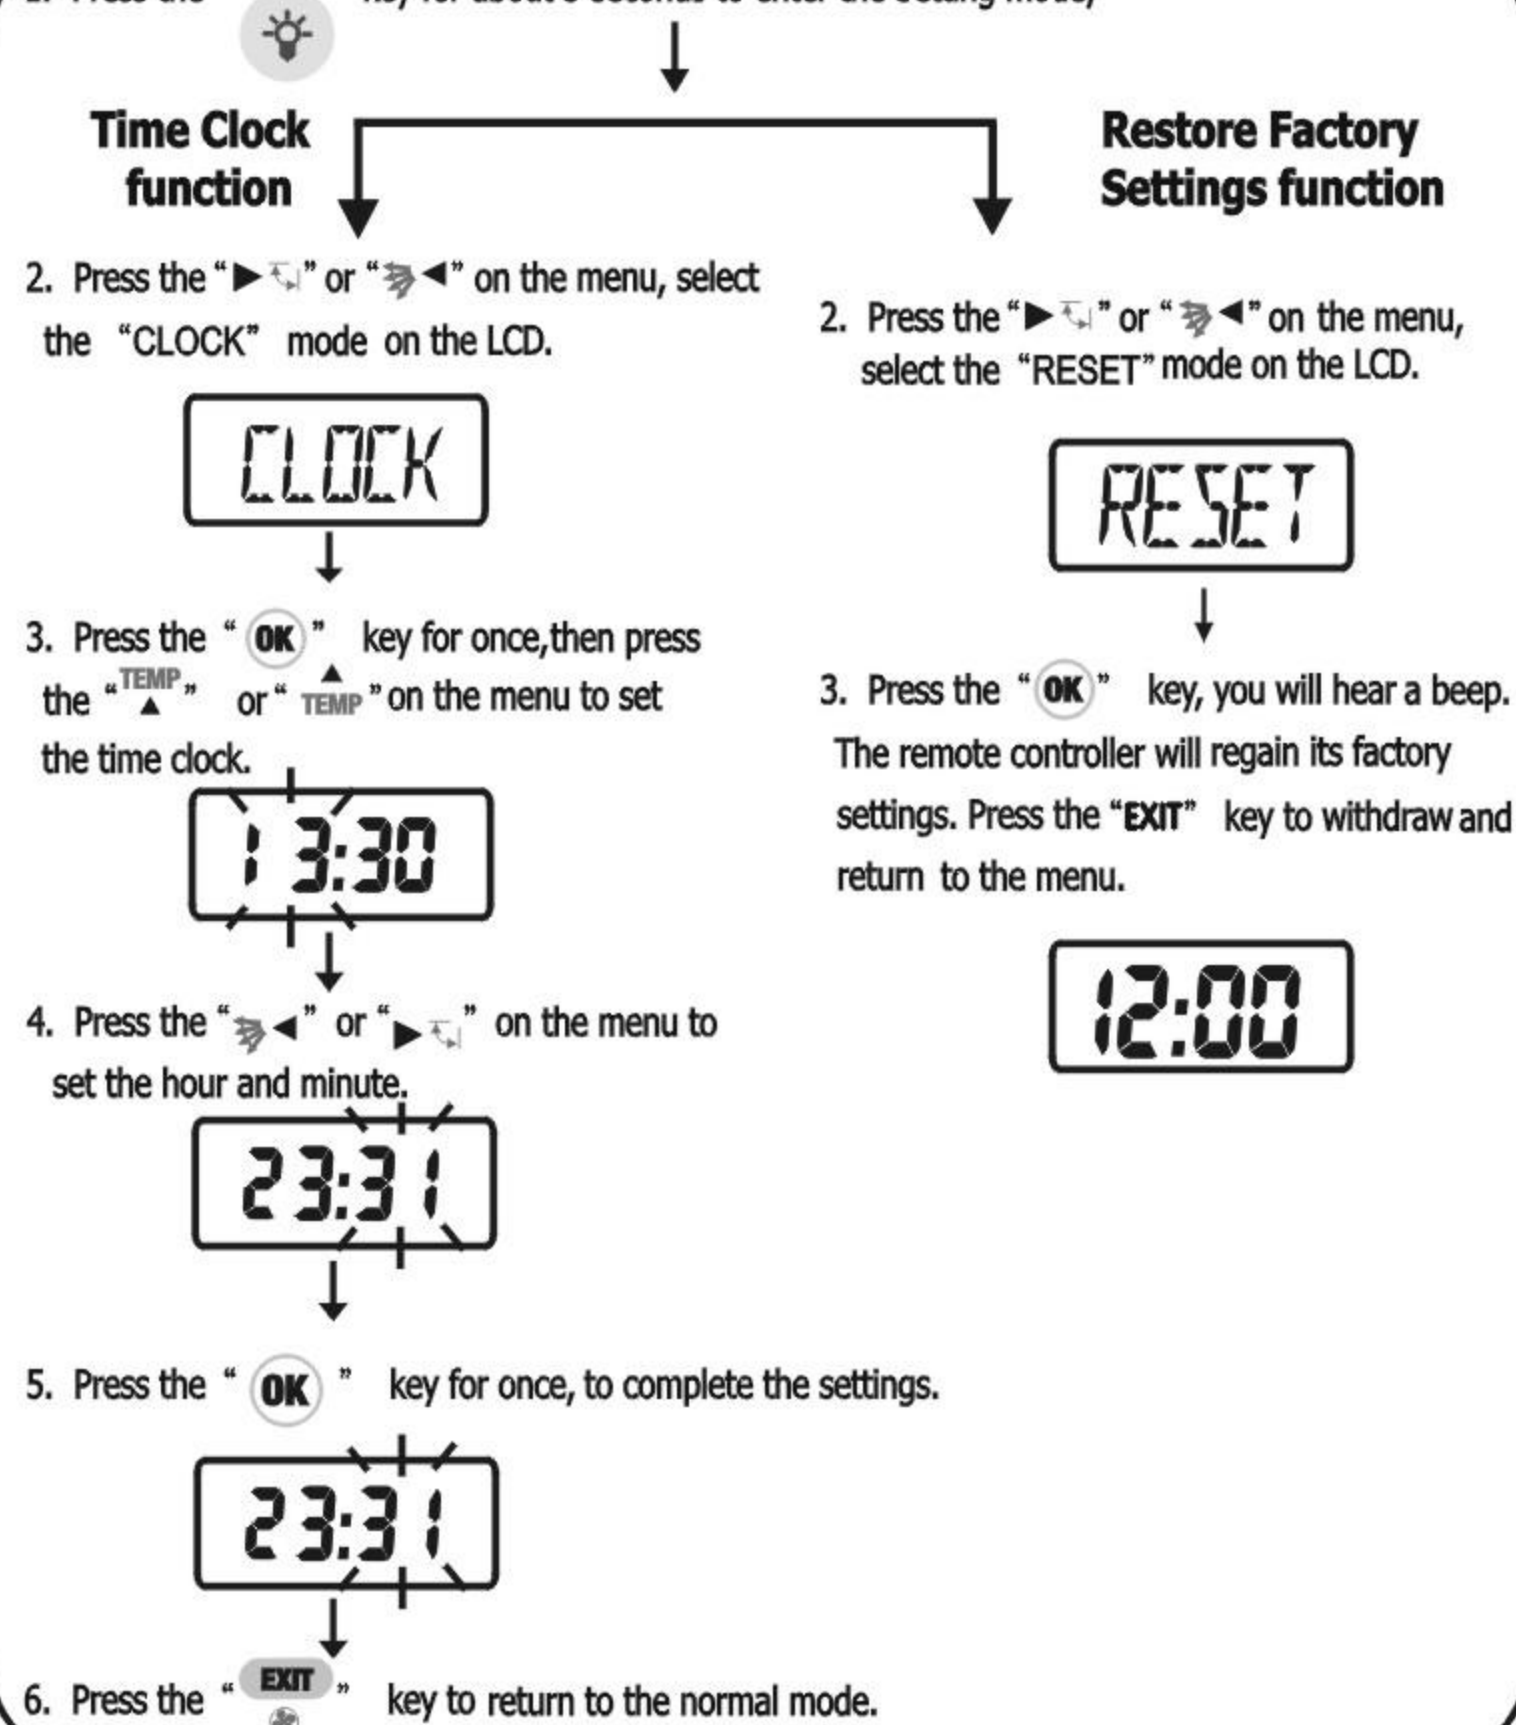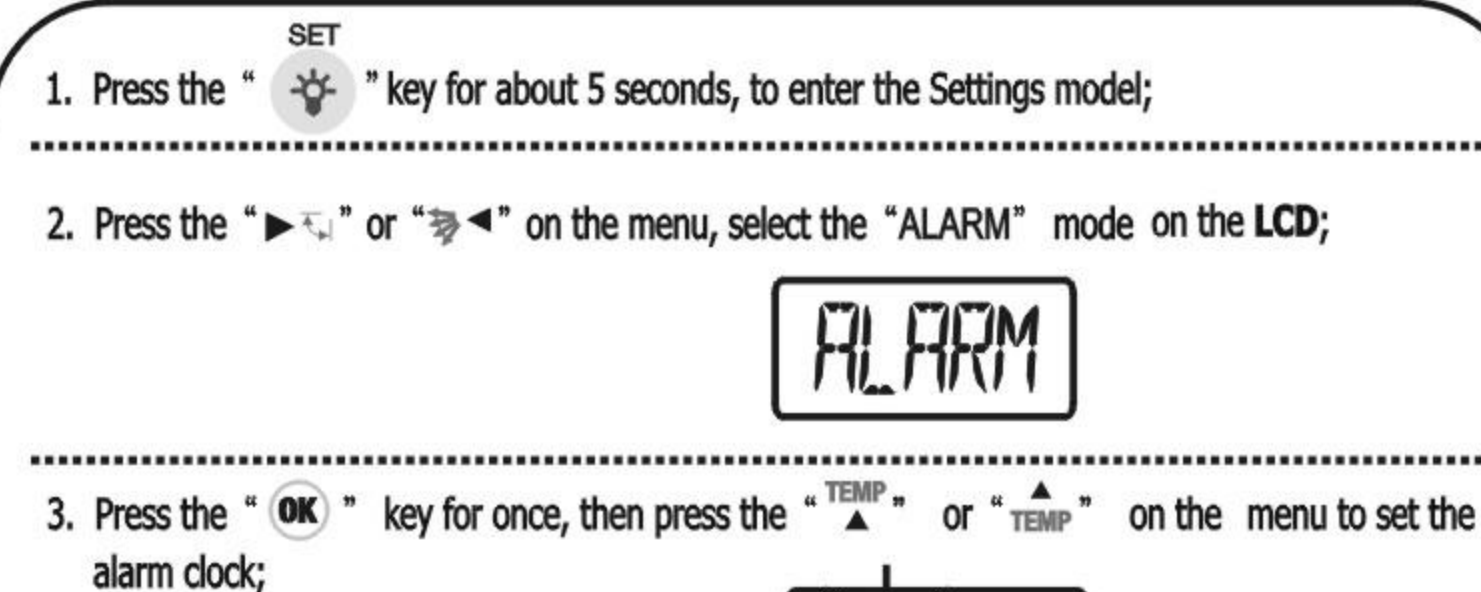**2. Set/Cancel Alarm Clock function****SETUP CODES FOR TV**

Tongguang0687,0707,0710,0733
Toshiba0022,0044,0094,0119,0138,0139
.....0141,0142,0276,0301,0328,0329,0339,0340	
.....0425,0446,0455,0458,0465,0491,0493,0518	
.....0528,0530,0545,0553,0558,0559,0607,0634	
.....0641,0642,0654,0661,0662,0668,0669,0670	
.....0681,0682,0684,0687,0707,0710,0733,0743	
.....0744,0745,0813,0939,0940,0941	
Towada0596
Toyoda0503
Trans continens0500,0513,0520,0600
Transfec0299
Transonic0311,0503,0513,0517
Trident0602
Tristar0300,0620
Triumph0301,0448,0468,0516,0549,0553
.....0566,0602,0628	
Tsoschi0510,0621
Tvtext0516,0628
Uher0011,0012,0036,0037,0038,0078,0255
.....0471,0472,0496,0504,0513,0572,0582,0612	
.....0618,0624	
Ultravox0003,0025,0082,0096,0146,0155
.....0299,0447,0477,0485,0493,0513,0539,0579	
.....0586,0596,0599,0607,0624	
Unic line0593,0624
United0375,0415,0501,0513,0518,0624
Universal0513
Universum0094,0160,0221,0307,0310,0349
.....0395,0446,0448,0451,0463,0464,0468,0470	
.....0471,0473,0474,0475,0476,0477,0481,0487	
.....0496,0500,0502,0503,0513,0515,0520,0531	
.....0548,0549,0554,0561,0562,0566,0568,0569	
.....0571,0573,0574,0576,0577,0578,0579,0590	
.....0591,0594,0596,0600,0610,0612,0617,0624	
.....0627,0631,0632,0633,0634,0643	
Unic linie0497,0513
Univox0001,0447,0482,0494,0513,0539
.....0581,0601,0610,0624	
Vestel0395,0500,0513,0516,0520,0596
.....0600,0624	
Vexa0503,0513
Vibrant0609
Videocon0033,0138,0141,0284
Videologic0599,0620
Videologique0299,0300
Videosat0477,0579
Videosystem0513
Videotechnic0299,0582,0600
Videoton0478,0587,0592
Vieta0343
Visiola0299
Vision0513,0582,0600
Vortec0513
Voxson0032,0155,0447,0482,0496
.....0539,0581,0612	
W.w.house0395
Waltham0302,0478,0482,0486,0496,0500
.....0513,0520,0528,0530,0587,0592,0600,0612	
.....0624,0641,0642	
Wamishi0311
Wards0550
Warumaia0666,0685,0696
Watson0037,0274,0300,0307,0379,0395
.....0396,0440,0482,0500,0503,0513,0520	
.....0582,0617,0620,0624	
Watt radio0001,0003,0025,0029,0030,0057
.....0299,0493,0594,0596,0599,0607	
Wega0446,0447,0513,0539,0624,0634
Wega color0119,0143
Wegavox0617
Weipai0670,0679
Weltblick0582
Wharfedale0287,0513,0516
White westinghouse0003,0037,0159,0299
.....0494,0513,0582,0599,0610,0624	
Winco0309
Windsor0500,0520
Windstar0494,0510,0621
Windy sam0516
Xenius0506
Xiahua0665,0670,0678,0679,0681,0687
.....0707,0708,0709,0710,0714,0727,0733	
.....0734,0749,0752,0863,0865,0871,0872	
.....0883,0884,0885,0916,0949	
Xiangyang0687,0707,0710,0733
Xiangyu0670,0679,0686
Xihu0665,0677,0678,0687,0692,0694,0697
.....0707,0733,0752,0785,0858,0873	
.....0874,0875,0876	
Xingfu0670,0679
Xinghai0670,0679,0687,0707,0710,0733
Xingmenban0758
Xinrisong0663,0711,0712,0755
Xinsida0777
Xrypton0624
Xuelian0663,0677,0678,0694,0697
.....0711,0712	
Yajia0687,0707,0710,0733
Yamaha0491
Yamishi0300,0497,0510,0513,0600
.....0613,0621	
Yingge0670,0677,0678,0679,0694,0697
Yokan0513,0624

SETUP CODES FOR TV

Yoko0004,0159,0299,0300,0310,0452,0477
.....0486,0503,0513,0556,0569,0592,0600,0617	
.....0620,0624	
Yongbao0663,0711,0712
Yonggu0670,0677,0678,0679,0694,0697
Yorx0300
Youlanasi0665,0677,0678,0694,0697
Yousida0663,0670,0679,0711,0712
Yuhang0670,0679
Zanela0489
Zanussi0078,0600
Zenith0203,0237
Zenor0452,0556
Zhuhai0670,0679,0696
8880687,0707,0710,0733
Others0264,0265,0305,0690,0698,0711
.....0718,0727,0731,0751,0755,0756	
.....0757,0758,0760	

SETUP CODES FOR TV

Seg0096,0299,0307,0313,0446,0484,0493
.....0500,0503,0506,0513,0520,0576,0591,0596	
.....0600,0607,0617,0624,0634	
Sei0447,0448,0451,0482,0483,0484,0493
.....0513,0539,0549,0554,0584,0594,0596,0602	
.....0607,0632	
Sei-sinudyne0447,0451,0483,0493,0513,0624
Seleco0011,0058,0078,0364,0371,0454
.....0466,0468,0482,0483,0523,0564,0581	
.....0584,0591	
Sencora0503,0617
Senra0276,0300,0545,0620
Serino0286,0311,0456,0497,0560,0599,0613
Seye0751
Shancha0665,0687,0707,0710,0733
Shangguangdian0812,0820,0821
Shanghai0663,0665,0670,0671,0676,0677
.....0678,0679,0687,0694,0697,0707,0710	
.....0711,0712,0733,0777	
Shanshui0662
Shaofeng0654,0660,0661,0665,0669,0677
Sharp0044,0054,0119,0124,0196,0198
.....0225,0227,0418,0419,0446,0451,0479,0522	
.....0554,0602,0630,0634,0657,0670,0672,0679	
.....0789,0790,0791	
Shencal0661,0670,0679,0687,0707
.....0710,0733	
Shengcai0711,0755
Shengli0658
Shenyang0665,0670,0679,0687,0699,0700
Sherwood0670,0679
Shintoshi0513,0624
Shivaki0513
Shorai0451,0550,0554
Shov0033
Shuyuan0785,0858
Siam0280
Siarem0000,0025,0029,0155,0447,0483
.....0493,0539,0584,0596,0602,0607	
Sicatel0001
Siemens0010,0231,0232,0233,0234,0236
.....0280,0354,0355,0465,0474,0475,0483	
.....0513,0563,0574,0584,0624	
Siera0280
Siesta0254,0470
Silva0481,0513,0599
Silva schneider0513
Silver0160,0280,0446,0481,0501,0550
.....0590,0634	
Singer0025,0029,0147,0149,0155,0280,0308
.....0447,0454,0493,0503,0513,0532,0539,0607	
Sinu0607
Sinudyne0006,0016,0025,0026,0029,0057
.....0109,0125,0126,0155,0192,0197,0280,0364	
.....0393,0447,0448,0450,0451,0481,0482,0483	
.....0484,0493,0513,0539,0549,0552,0554,0594	
.....0596,0602,0607,0632	
Skantic0478,0587,0588
Sky0280,0513
Skysonic0287
Skyworth-rgb0665,0679,0687,0699
.....0700,0714,0724,0725,0726,0727,0728,0733	
.....0737,0755,0761,0762,0763,0797,0814,0822	
.....0823,0824,0830,0834,0835,0848,0849,0850	
.....0851,0852,0853,0854,0886,0888,0929,0930	
.....0931,0932,0934,0935,0936,0937,0938	
Slx0500
Smaragd0505
Solavox0314,0481,0482,0485,0488,0492
.....0513,0581,0586,0590,0595,0606	
Sonawa0300
Songbai0670,0679
Songdian0755
Soniko0513
Sonitron0452,0470,0556,0568
Sonneclair0513
Sonoko0503,0510,0513,0617,0621,0624
Sonolor0308,0481,0482,0483,0488,0495
.....0510,0581,0590	
Sontec0451,0470,0503,0513,0554,0568
.....0617,0624	
Sony0028,0119,0126,0127,0128,0129,0130
.....0182,0199,0228,0260,0316,0317,0344,0345	
.....0346,0347,0348,0376,0446,0460,0461,0462	
.....0493,0502,0513,0607,0631,0632,0633,0634	
.....0659,0695,0703,0748,0760,0802,0891,0892	
.....0893,0894	
Sound & vision0300,0493,0504,0607,0618
Soundesign0550
Soundwave0496,0501,0513,0582,0612,0624
Spectra0503
Srypton0513
Ssangyong0503,0617
Standard0300,0503,0504,0513,0520,0582
.....0600,0617,0618,0620,0624	
Starlite0503,0513,0596
Stenway0300,0510,0620,0621
Stern0078,0466,0482,0564,0581
Strato0503,0513,0624
Stylandia0600
Sumo0868
Sunkai0280,0300,0311,0313,0451,0453
.....0456,0497,0505,0554,0555,0560,0613	
Sunstar0274,0503,0513,0523,0617,0624,0638


SETUP CODES FOR TV

Sunwood0513,0624
Super tech0299,0300,0379,0395,0503
.....0513,0516,0599,0617,0624	
Superla0299,0602
Supervision0395
Supra0503,0617
Susumu0304,0529,0532,0620
Sutron0503
Sva0517
Swissline0477
Sydney0299
Sysline0513,0624
Sytong0299,0599
T+a0538
Tactus0609
Tai wah0218,0219
Taishan0665,0670,0679,0681,0682,0683
.....0684,0685,0692,0696	
Tandberg0016,0180,0266,0371,0469,0542
.....0567,0578	
Tandy0300,0482,0492,0581,0600,0606
.....0620,0630	
Targa0446
Tashiko0299,0480,0482,0513,0546,0581
.....0589,0599,0600,0634	
Tatung0002,0004,0026,0028,0031,0131
.....0395,0492,0502,0518,0600,0602,0606	
.....0609,0624,0631	
Tcl0705,0707,0722,0725,0727,0736,0737
.....0738,0739,0764,0765,0798,0810,0853	
.....0863,0870,0897,0898,0899,0900,0901	
.....0902,0903	
Teac0281,0309,0311,0392,0484,0486,0497
.....0500,0503,0513,0515,0525,0624	
Tec0304,0312,0466,0477,0494,0503,0513
.....0564,0579,0596,0600,0610,0617,0647	
Tech line0500,0513
Techica0300
Techimagen0395
Techline0307
Technema0582
Technics0491,0516,0637
Technisat0516
Technol ace0550
Technovision0263
Tecnimagen0516
Tedalex0486,0503
Tele+10248
Teleavia0186,0302,0608,0642,0643
.....0648,0649	
Telecor0300,0466,0482,0513
Telefunken0067,0075,0098,0132,0133,0134
.....0135,0140,0185,0186,0231,0235,0302,0304	
.....0306,0312,0315,0427,0428,0429,0433,0434	
.....0435,0438,0468,0472,0513,0528,0529,0530	
.....0531,0532,0533,0534,0536,0572,0608,0624	
.....0640,0641,0643,0644,0646,0647,0648,0652	
Telefusion0513
Telegazi0300,0466,0482,0513,0624
Telemeister0582,0624
Teleservice0203,0246
Telesonic0513,0624
Telestar0513,0516,0624
Teletech0307,0477,0494,0500,0503,0513
.....0520,0610,0617,0624	
Teleton0446,0466,0484,0564,0585,0600
.....0634	
Televideon0299,0482,0582,0596,0599
Television0513
Televiso0308,0495
Tellevia0511,0530,0531,0534
Temco0451,0554
Tempest0503
Tennessee0513,0624
Tensai0013,0016,0033,0037,0039,0178
.....0300,0451,0463,0464,0477,0501,0503,0504	
.....0513,0523,0543,0554,0561,0562,0579,0582	
.....0600,0617,0618,0620,0624,0638	
Tenson0503,0582
Tevion0307,0500,0513,0518,0520,0521
Textet0503,0504,0599,0617,0618,0620
Thom0393
Thomson0065,0067,0075,0078,0098,0100
.....0101,0185,0186,0222,0291,0302,0304,0306	
.....0312,0315,0484,0511,0513,0528,0529,0530	
.....0531,0532,0533,0534,0536,0585,0605,0608	
.....0624,0641,0642,0643,0646,0647,0648,0649	
Thorn0446,0463,0474,0480,0481,0489,0492
.....0513,0515,0528,0532,0545,0559,0561,0589	
.....0590,0601,0606,0609,0618,0624,0626,0627	
.....0633,0646,0648,0652	
Thorn-ferguson0001,0135,0136,0137,0140
.....0144,0148,0152,0160,0186,0229,0256	
.....0304,0489	
Tiane0657,0665,0672
Tiankeban0755
Tmk0549
Tobo0670,0679,0687,0707,0710,0731
.....0733,0755,0757	
Tokai0482,0492,0494,0500,0503,0504,0513
.....0520,0581,0610,0617,0624	
Tokaido0520
Tokyo0276,0299,0545
Tomashi0300,0510,0621

Six-in-one Universal Remote Controller with LCD Display

ENGLISH

 4. Press the "←" or "→" on the menu to set the hour and minute.

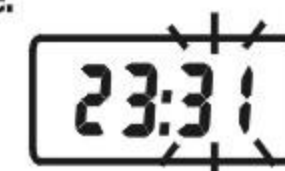

5. Press the "OK" key, then press the "TEMP" key for once.



6. Press the "OK" for once to turn on the time clock, then press the "EXIT" key to return to the original state, the screen will display "🔔".
6. Press the "OK" to cancel the time clock, then press the "EXIT" key to return to the original state, the screen will not display "🔔".

 
3. Key Sound On/Off Settings

1. Press the "SET" key for about 5 seconds, to enter the Settings mode.

2. Press the "←" or "→" on the menu, or select the mode on the LCD.



3. Press the "OK" key for once, then press the "TEMP" key on the menu

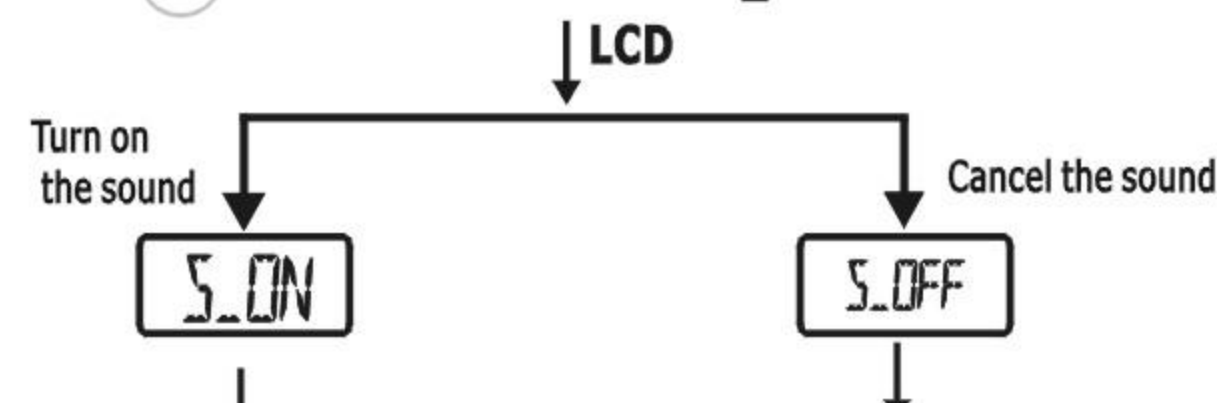

4. Press the "OK" to turn on the sound, press the "EXIT" key again to return to the original state.
4. Press the "OK" to cancel the sound, press the "EXIT" key to return to the original state.

4. Sound Sharing Function

After setting this function, you can take control of the sound volume on four kinds of home appliances (VCR, SAT, DVD and CD) by use of the volume control key on the TV

Note: A/C (air-conditioner) page has no function as such.

E.g.: to cite DVD as an example:

1. Press DVD key once to switch to DVD interface.



 
2. Press the "SET" key for about 5 seconds, to enter the Settings mode.



3. Press the "←" or "→" on the menu or select the mode on the LCD.



4. Press the "OK" key for once, then press the "TEMP" key on the menu.

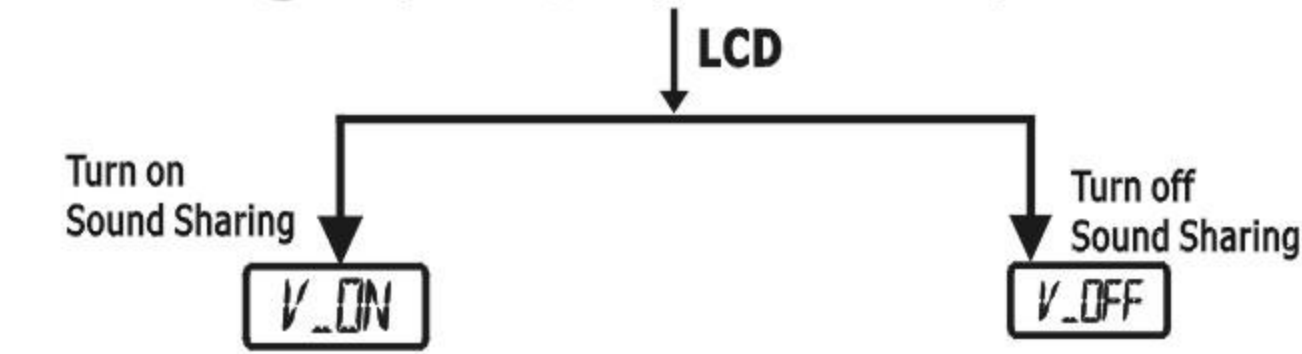

5. Press the "OK" for once to turn on the Sound Sharing function, press the "EXIT" key for once to return to the original state.

5. Press the "OK" for once to turn off the Sound Sharing function, press the "EXIT" key for once to return to the original state.

Note: after turning on the Sound Sharing function, the sound keys on the Settings interface (VOL+, -, and mute) can all be controlled by the volume keys on that home appliance that is set at the last. When you have to use this function after reinstalling the batteries, you must redo the settings.

5. Backlight Control Function

Press the "SET" key to enter the backlight mode, then press the "SET" key to cancel the backlight mode.



6. Macro instruction Function

This remote controller has four Multi-function Keys: M1, M2, M3 and M4. Each multi-function key can store 15 key codes. This function allows you to integrate many continuous or routine key control motions into one. After finishing the settings, if you press your pre-set multi-function key, this remote controller will emit your pre-set key control codes in a due order, thus to make your operations much simpler.

Regular Information Sending Function: you can turn on your home appliance at a pre-set time, so as to avoid you from missing your favorite program.

Notes:

- The macroinstruction function shall be used when this remote controller can take control of home appliances.
- The Macroinstruction key is not affiliated to any home appliance. Therefore, when you press the Macroinstruction key of any home appliance (when the Macroinstruction function key works normally), the same instruction code will be sent out.
- When the Macroinstruction function key is set effective, the uppermost right side of the screen will display "M"; if the Timing function of the Macroinstruction key has been turned on (so long as one Macroinstruction key has been equipped with a timing function), the screen will display "TM". To view which Macroinstruction key has been equipped with the timing function, you can enter the "Mx ADD" menu. If any key has such setting, the screen will display "ON" beside it.
- When adding in a Macroinstruction, the added instruction is under the current code of the current home appliance. Once added successfully, the instruction will have nothing to do with the code set on the home appliance.

Notes:

- The LCD displays **CLR M1**, meaning Cancel the settings at the M1 key. Press the "OK" key to confirm, press the "EXIT" key to withdraw.
- The LCD displays **CLR M2**, meaning Cancel the settings at the M2 key. Press the "OK" key to confirm, press the "EXIT" key to withdraw.
- The LCD displays **CLR M3**, meaning Cancel the settings at the M3 key. Press the "OK" key to confirm, press the "EXIT" key to withdraw.
- The LCD displays **CLR M4**, meaning Cancel the settings at the M4 key. Press the "OK" key to confirm, press the "EXIT" key to withdraw.
- The LCD displays **M1 ADD**, meaning Adding in an instruction into the M1 key;
- The LCD displays **M2 ADD**, meaning Adding in an instruction into the M2 key;
- The LCD displays **M3 ADD**, meaning Adding in an instruction into the M3 key;
- The LCD displays **M4 ADD**, meaning Adding in an instruction into the M4 key;
- Press equipment key to delete the previous instruction; and press "SET" to exit adding instruction mode.

SETUP CODES FOR TV

Osio0280,0476,0513,0624
Oso0300,0620
Osume0300,0446,0492,0513,0606,0620
0624,0634
Otake0543
Otto Versand0025,0027,0044,0052,0055
0280,0446,0450,0451,0474,0475,0477
0481,0483,0484,0509,0513,0515,0516
0528,0552,0554,0563,0574,0579,0582
0584,0585,0590,0594,0596,0600,0624
0627,0628,0630,0632,0633,0634,0636
0641,0648
OULIN0755
Pacific0516,0518,0520,0521
Pael0003,0008,0299,0599
Palladium0197,0280,0470,0477,0484,0496
0513,0518,0521,0568,0612
Palsonic0280,0309,0496,0513,0525
Panama0280,0299,0477,0513,0579,0600
Panasonic/National0001,0003,0019,0037
0040,0106,0110,0111,0112,0114,0190,0212
0241,0280,0307,0314,0366,0367,0368,0369
0388,0469,0481,0482,0483,0485,0488,0491
0509,0513,0567,0581,0584,0590,0595,0597
0602,0622,0624,0636,0637,0655,0656,0668
0669,0674,0675,0676,0713,0720
Panavision0280,0513,0624
PANDA0655,0663,0665,0670,0675,0676
0677,0678,0679,0680,0682,0687,0694,0697
0705,0707,0710,0711,0712,0715,0716,0727
0733,0743,0745,0755,0778,0779,0835,0857
0858,0862,0917,0918,0950
Pathe Cinema0299,0308,0482,0486,0489
0495,0581,0582,0596,0599,0601
Pathe Marcon0511,0531,0534,0608,0643
0649
Pausa0503,0617
PDLYTRON0805,0806,0868
Perdio0280,0482,0492,0510,0513,0581
0582,0624
Perfekt0280,0513
Pershin0308,0495
Philco0019,0023,0024,0025,0151,0155
0169,0190,0231,0280,0447,0470,0477
0496,0513,0539,0568,0576,0579,0596
0612,0624
Philex0229,0485,0586
Philips0003,0026,0027,0046,0073,0113
0115,0155,0191,0192,0193,0194,0223,0230
0242,0266,0280,0306,0336,0360,0393,0397
0401,0404,0405,0406,0407,0408,0409,0410
0411,0425,0447,0475,0481,0489,0503,0504
0512,0513,0514,0516,0539,0546,0574,0618
0623,0624,0625,0628,0648,0667,0677,0678
0693,0694,0697,0795,0895,0896
Phoenix0280,0299,0393,0447,0472,0513
0539,0572,0582,0596,0599
Phonola0175,0299,0395,0397,0447,0513
0539,0599,0624
Phonotrend0280
pilot0290,0293,0295,0296,0297,0298,0544
Pioneer0000,0027,0067,0243,0280,0306
0330,0472,0481,0482,0513,0515,0528,0529
0570,0572,0581,0590,0605,0624,0641
Pionier0470,0472,0481,0513,0528
Plantron0280,0503,0513,0617
Playsonic0452,0501,0513,0518,0600
Polestar0214
Policom0531,0534
Poppy0503
Portland0504,0618
Powerpoint0313,0505,0513
Prandoni-Prince0008,0032,0146,0481
0590,0602
Praxis0217
precision0600
Prinston0520
Prinz0481,0484,0492,0594
Profekt0280
Profex0481,0482,0503,0576,0581,0590
0592,0617
Profi0503,0617
Profitronic0280,0493,0513,0607,0624
Proline0280,0315,0492,0506,0513,0536
0555,0606
Prosat0001
Prosonic0274,0280,0299,0470,0500,0504
0513,0518,0523,0624
Protech0280,0307,0472,0477,0486,0493
0494,0496,0500,0503,0513,0520,0579,0592
0596,0600,0607,0610,0612,0617,0624
Provision0280,0395,0513,0516,0518
PYE0280,0395,0447,0475,0484,0504,0513
0516,0539,0574,0624,0628
Pymi0503
QINGDAO0655,0665,0675,0676,0687,0707
0710,0733
Quadra Vision0308,0495
quasar0579
Quastar0477,0503
Quelle0004,0005,0007,0008,0009,0010,0013
0016,0026,0027,0028,0045,0050,0051,0052
0069,0094,0153,0221,0231,0232,0233,0234
0235,0236,0280,0307,0463,0474,0475,0481

SETUP CODES FOR TV

.....0500,0502,0513,0515,0561,0574,0578,0590	
.....0594,0596,0624,0627,0631,0632,0633	
Questa0446,0634
Radialva0280,0300,0486,0494,0592
0610,0620,0624
Radio0395
Radiola0242,0280,0397,0513,0516
0600,0624
Radiomarelli0447,0513,0539,0579,0602,0624
RadioShack0513,0544,0624
Radiotone0274,0280,0309,0500,0503
0513,0520,0570,0578,0617,0624
Rank Arena0446,0634
Rank0022
RBM0022,0094
RCA0204,0210,0211,0304,0315,0536
Reallistic0544
Recor0280,0513,0624
Rectiligne0513
Rediffusion0005,0041,0116,0314
0446,0468,0481,0485,0488
0586,0590,0595
Redstar0624
Reflex0500,0513,0520,0624
Reoc0518
Revox0280,0513,0624
REX0011,0021,0032,0078,0079,0118,0466
0482,0564,0581
RFT0447,0492,0513,0539,0570,0606
Rhapsody0299
RIHONG0727
RISHENG0751
RIZHI0727,0751
R-Line0280,0513,0624
Roadstar0039,0280,0300,0379,0417,0496
0500,0503,0510,0513,0520,0612,0617
0620,0624
Robotron0447,0539
Rowa0525,0665,0667,0670,0677,0678,0679
0694,0697,0750,0781,0902,0921,0922
Royal Lux0309,0310,0470,0532
RTF0539
RUYI0665,0669,0677,0678,0694,0697
SABA0000,0065,0067,0075,0085,0098,0099
0100,0103,0117,0155,0185,0186,0222,0224
0302,0304,0306,0314,0315,0427,0428,0429
0431,0432,0434,0435,0436,0438,0447,0481
0482,0483,0488,0511,0518,0528,0529,0531
0532,0533,0534,0536,0539,0581,0584,0590
0595,0597,0598,0602,0605,0608,0641,0643
0646,0648,0649
Saccs0489,0601
Sagem0286,0311,0456,0497,0560,0613
SAIGE0665,0670,0679
Saisho0004,0006,0028,0088,0182,0244
0448,0450,0486,0502,0503,0549,0552,0592
0594,0600,0602,0617,0631
Saivod0500,0513,0520
Sakan0482
Salora0005,0047,0048,0055,0066,0068,0069
0076,0082,0086,0097,0162,0177,0195,0249
0250,0267,0268,0314,0349,0471,0476,0478
0480,0481,0482,0484,0488,0577,0581,0585
0587,0589,0590,0595,0596,0602
Salsa0532
Sambers0000,0004,0008,0029,0030,0043
0493,0576,0602,0607
Sampo0544
Samsung0026,0033,0043,0159,0160,0170
0175,0212,0215,0271,0272,0280,0285
0299,0356,0393,0394,0398,0399,0400,0402
0403,0407,0420,0424,0426,0437,0470,0476
0482,0492,0503,0513,0516,0517,0524,0526
0527,0568,0577,0599,0600,0606,0617,0624
0628,0629,0639,0662,0665,0670,0675,0678
0679,0687,0691,0693,0694,0697,0704,0705
0745,0767,0777
Sandra0299,0599,0600
SANJIAN0687,0707,0710,0733
SANKEN0869
SANLING0690,0698
Sansui0280,0513,0624
Santon0503
Sanyo0013,0031,0044,0074,0119,0120,0121
0122,0123,0162,0167,0170,0182,0195,0205
0280,0299,0327,0439,0446,0452,0463,0470
0492,0502,0508,0556,0561,0568,0594,0599
0600,0606,0616,0631,0634,0635,0654,0661
0662,0668,0669,0687,0689,0707,0710,0733
0759,0786,0787,0788,0856,0877
SANYUAN0657,0665,0670,0672,0677
0678,0679,0694,0697
SBR0280,0513,0516,0546,0624
schaub lorenz0584,0590,0597
Schneider0004,0011,0015,0019,0025,0026
0036,0038,0255,0258,0262,0280,0300,0306
0307,0374,0393,0395,0408,0412,0422,0440
0466,0477,0481,0482,0484,0500,0513,0516
0518,0520,0521,0523,0535,0564,0579,0583
0590,0594,0600,0620,0624,0628,0638,0650
Scotland0482,0581
sears0550
Seaway0506
Seelver0520

SETUP CODES FOR TV

Kontakt0313,0505
Korpel0280,0513,0624
Korting0037,0155,0157,0310,0447,0539
.....0569,0582
Kosmos0280,0624
Kotron0309
Koyoda0503,0617
Kraking0489,0601
KTV0544,0600
KUAILE0670,0679,0687,0707,0710,0733
Kuba0484
KUNLUN0655,0665,0666,0675,0676,0679
.....0687,0693,0694,0696
Kyoshu0309,0496
Kyoto0482,0581
L&S Electronic0518
LaSAT0472,0572
layco0554,0606,0624
Leader0503
Lecson0280,0287,0513
Lenco0033,0039,0183,0238,0239,0240,0280
.....0504,0513,0561
Lenoir0004,0503
Lesa0477
Leyco0274,0280,0451,0492,0513
LG0280,0299,0476,0477,0482,0486,0501
.....0513,0516,0518,0525,0528,0678,0694,0697
.....0752,0794,0913,0914,0915
Liesen & Tter0280,0513,0624
Lifetec0280,0300,0307,0500,0503,0504
.....0513,0518,0520,0521,0618,0620,0624
LIHUA0665
Line0617
Lloyd's0503
LME0486
Loewe Opta0052,0081,0155,0156,0189
.....0213,0242,0280,0393,0399,0400
.....0411,0413,0447,0467,0470,0513
.....0515,0539,0542,0565,0598,0624,0627
Logik0028,0502,0523,0631
Logix0307,0500
LONGLIANG0665,0687,0707,0710,0733
Luma0032,0082,0280,0466,0564,0591
Lumatron0280,0466,0482,0513,0600
Lux May0280,0503,0513
Luxor0005,0045,0047,0055,0068,0083,0084
.....0085,0086,0087,0162,0177,0314,0351,0364
.....0471,0476,0478,0481,0482,0484,0487,0488
.....0520,0577,0581,0585,0587,0588,0590,0595
M electronic0306,0463,0464,0468,0471,0473
.....0477,0482,0484,0503,0504,0506,0513,0515
.....0518,0561,0562,0566,0571,0573,0579,0581
.....0599,0600,0605,0617,0618,0624,0627,0641
Madison0513
Magnadyne0000,0019,0025,0029,0057,0147
.....0149,0150,0155,0447,0477,0483,0493,0539
.....0579,0584,0594,0596,0602,0607
Magnaфон0000,0003,0008,0029,0030,0299
.....0493,0576,0599,0602,0607,0652
Magnavox0280,0446,0502,0550,0634
Magnum0501,0513,0518,0624
Manesth0276,0280,0450,0451,0513,0545
.....0552,0554,0582,0600,0624
Manhattan0280,0307,0500,0513,0520
MANTIAXING0768
Marantz0026,0027,0280,0513,0516,0519
.....0544,0624,0628
Marelli0447,0539
Mark0280,0299,0331,0395,0423,0501,0503
.....0504,0513,0518,0624
Masuda0300,0503
Matsui0004,0006,0028,0041,0088,0182,0274
.....0276,0280,0304,0311,0313,0317,0318,0327
.....0332,0338,0354,0358,0372,0379,0382,0446
.....0448,0450,0451,0453,0465,0482,0486,0492
.....0497,0502,0503,0505,0513,0516,0518,0520
.....0523,0532,0545,0549,0552,0554,0563,0581
.....0594,0600,0602,0606,0609,0613,0617,0619
.....0624,0631,0634,0638,0646
Matsushita0637
Maximal0058
McMichael0546
Mediator0280,0513,0624
Medio0395
Medion0280,0307,0500,0513,0515,0516
.....0518,0520,0521,0525,0624
Medison0280
Megas0286,0456,0560
MEI0520
MEILE0663,0665,0677,0678,0687,0694
.....0697,0707,0710,0711,0712,0733
Melectronic0255,0280,0299
Melvox0308,0495,0611
Memorex0503,0520,0617
Memphis0494,0610
MENGMEI0677,0678,0694,0697
Mercury0280,0503,0513
Metronic0536
Metz0018,0053,0089,0090,0091,0155,0180
.....0183,0447,0469,0474,0475,0500,0513,0517
.....0538,0539,0540,0541,0567,0574,0624
MGA0544
Micromaxx0280,0307,0500,0513,0520
Minato0513

SETUP CODES FOR TV

Minerva0010,0018,0045,0051,0053,0313
.....0474,0475,0505,0508,0574,0619
Minoka0280,0309,0480,0513,0589
Mitsubishi0044,0052,0092,0119,0154,0155
.....0181,0182,0280,0384,0385,0386,0387,0446
.....0447,0474,0508,0513,0515,0516,0520,0539
.....0616,0624,0627,0634,0665,0705
Mivar0000,0003,0093,0094,0095,0245,0259
.....0299,0303,0467,0470,0476,0499,0565,0577
.....0580,0599,0602,0615
Miver0357,0370
Monaco0503,0617
Morgans0280,0513
motion0576
motorola0630
MTC0299,0470,0484,0515,0568,0585,0627
MTEC0609
MTlogic0518
MUDAN0655,0656,0665,0670,0674,0675
.....0676,0679,0686,0687,0693,0694,0697,0707
.....0710,0713,0717,0719,0733,0755,0761
.....0799,0800,0803,0872,0877
Multistandard0493
Multisystem0159
Multitec0472,0500,0513,0520,0576,0598
.....0599,0600,0617
Multitech0096,0170,0172,0280,0299,0307
.....0472,0477,0493,0503,0513
Murphy0041,0299,0482,0581,0599,0606
Musikland0300,0477
Myryad0516,0628
N.E.I.0166,0280
NAD0481
Naiko0280,0498,0513,0571,0614
Nakamura0280,0618,0624
NANBAO0663,0670,0679,0687,0707,0710
.....0711,0712,0733
NANSHENG0665,0687,0707,0710,0733
NAT0509
National0509,0645
NEC0184,0280,0311,0326,0446,0459,0497
.....0502,0503,0504,0544,0548,0582,0658,0660
.....0665,0670,0678,0679,0687,0707,0710,0733
.....0743,0794
Neckermann0004,0026,0044,0055,0082,0097
.....0170,0280,0447,0470,0475,0477
.....0539,0563,0568,0574,0579,0582
.....0585,0612,0624,0628,0633
.....0484,0496,0513,0516
NEI0393,0486,0494,0513,0523,0592,0610
.....0624,0638
Nesco0477,0550,0579
Netsat0280,0513
Network0494,0610
Neufunk0280,0286,0456,0503,0513,0516
.....0518,0624,0628
New Tech0280,0306,0503,0513,0516,0600
.....0648
New World0300
nicam0594
Nicamagic0299
Nikkai0276,0280,0299,0300,0446,0492,0494
.....0503,0513,0545,0599,0600,0606,0610,0617
.....0620,0624,0634
NIKON0663,0711,0712
Noblex0280
Nobilko0003,0008,0029,0051,0146,0299
.....0493,0576,0599,0607
Nogamatic0511,0528,0531,0534,0608,0643
NOKIA0289,0314,0349,0350,0359,0361
.....0362,0363,0364,0452,0456,0468,0471,0480
.....0481,0482,0483,0484,0485,0487,0488,0498
.....0504,0550,0556,0560,0566,0571,0575,0581
.....0582,0584,0585,0586,0589,0590,0593,0595
.....0597,0614,0618
Nokia Oceanic0362,0363
Nordmende0065,0067,0075,0098,0099,0100
.....0101,0102,0103,0104,0134,0185,0186,0222
.....0280,0302,0304,0306,0434,0435,0436,0465
.....0511,0513,0518,0528,0529,0531,0533,0534
.....0605,0608,0641,0643,0648,0649
Normerel0513
Novatronic0280,0464,0504,0513,0562,0624
Oceanic(F)0005,0040,0105,0106,0107,0308
.....0481,0482,0483,0487,0488,0495
.....0581,0584,0590,0595
Okana0568,0617,0624
Okano0280,0379,0393,0470,0503,0513
Onceas0004
Onimax0518
Onwa0300,0422,0493,0523,0607,0620,0638
Opera0280,0513
Optimus0637
Orbit0280,0513
Orion0006,0016,0028,0057,0088,0108,0109
.....0187,0188,0189,0280,0304,0309,0320,0321
.....0322,0397,0448,0450,0451,0453,0493,0502
.....0513,0516,0518,0543,0549,0550,0552,0554
.....0555,0582,0594,0602,0624
Online0280,0300,0513,0620,0624
Ormond0307,0500,0520
Orsowe0602
Osaki0280,0300,0309,0453,0492,0504,0513
.....0516,0600,0606,0609,0618,0620,0624

Six-in-one Universal Remote Controller with LCD Display

ENGLISH

- **MI XX** "XX" means the number of instructions in the M1 Macroinstruction Key; up to 15 instructions can be stored.
- **MI TM** can display the time of regular code sending by this Macroinstruction key at the time display area; and the hour digit will blink, waiting for the user to adjust the time of regular code sending.
- **MI XS** "X" means the time interval (X seconds) between this instruction and the next instruction, when being sent.

A. Macro Settings

Example 1. Operating steps: switch on the power to the TV set → shift between TV/VCR → switch on the power to VCR → start playing, use a multi-function key "MI" to take control.

Do the settings as follows:

1. Press key TV once to switch to "TV" interface. **LCD:**
2. Press the "SET" key for about 5 seconds, enter the sub-menu state, then press the "▶" key or "◀" to set the menu at "MACRO", press the "OK" key. **LCD:**
3. Click the "TEMP" key on the menu. **LCD:**
4. Press the "OK" key again. The LCD displays **MI 00**.
(If the display is not M1-00, press equipment key to adjust).
5. Press the "ON-OFF" key for a while, until the LCD displays **MI 25**, then loosen the key, the LCD displays **MI 01**.
6. Press the "TV/AV" key for a while, until the LCD displays **MI 25**, then loosen the key, the LCD displays **MI 02**.
7. Press the "SET" key for once, the LCD displays **MI TM**.
8. Press key "EXIT" twice to return to interface TV. Press key VCR once to select VCR interface; **LCD:**
9. Press the "SET" key for about 5 seconds, to enter the Settings mode.
10. Press the "▶" or "◀" on the menu, or choose on the LCD, the LCD displays **MACRO**.
11. Press the "OK" key, then press the "TEMP" key on the menu: **MI ADD**.
12. Press the "OK" key again, the LCD shows **MI 02**.
13. Press the "ON-OFF" key for a while, until the LCD displays **MI 25**; then loosen the key, the LCD displays **MI 03**.
14. Press the "▶" key (Play) for a while, until the LCD displays **MI 25**, then loosen the key, the LCD displays **MI 04**.

SETUP CODES FOR TV

.....	0477,0483,0539,0576,0584,0596
Crown	0274,0280,0310,0313,0352,0372
.....	0423,0452,0470,0472,0480,0496,0498,0501
.....	0503,0505,0513,0518,0556,0568,0569,0572
.....	0576,0589,0612,0617,0624
Crystal	0486,0592
CS Electronics	0299,0300,0477,0579
.....	0599,0620
CTC Clatronic	0096,0477,0579
Curtis mathes	0630
Cybertron	0300,0620
Daewoo	0168,0209,0280,0299,0300,0341
.....	0342,0378,0380,0393,0395,0503,0504,0506
.....	0507,0513,0516,0521,0600,0617,0618,0620
.....	0624,0626
Dainichi	0299,0300,0599,0620
Dansai	0276,0280,0299,0446,0503,0513
.....	0545,0599,0624,0634
Dansette	0309
Dantax	0501,0518,0572
Dawa	0280,0513
Dayton	0503,0617
Daytron	0280,0503,0504,0513,0618
DAYU	0666,0685,0696
De Graaf	0488,0595
Decca.....	0002,0004,0026,0028,0031
.....	0258,0280,0492,0513,0598
.....	0600,0602,0606,0609,0624
Deccacolor	0394,0402,0403
Deitron	0280
Denver	0513,0624
Desmet	0280,0447,0503,0513,0617,0624
DETRON	0866
Diamant	0280,0513,0624
Diamond	0280
Digatron	0513
Digiline	0280,0464,0500
DIGITEC	0801,0804,0868
Dixi	0280,0447,0503,0513,0617,0624
Domeos	0500
DONGDA	0670,0679
DONGHAI	0670,0679
DONGLIN	0731
Drean	0280
DSE(Digital)	0026,0027,0033
DTS	0503
Dual	0255,0258,0280,0306,0395,0440
.....	0466,0513,0521,0535,0564,0583,0594,0596
.....	0600,0650
Dual-Tec	0004,0011,0019,0600
Dumont	0155,0447,0483,0493,0578,0584
.....	0607
DUONGJIE	0727,0751,0755
Dux	0280,0513
D-Vision	0513,0516
Dynatron	0280,0513
Edison-Mnierva	0505
Elbe	0001,0171,0280,0286,0300,0456,0466
.....	0467,0489,0564,0565,0600,0601,0602
.....	0510
Elekta	0280,0513
ELG	0280,0513
Elin	0280,0299,0314,0463,0481,0484,0488
.....	0503,0513,0561,0585,0590,0595,0617,0624
Elite	0108,0280,0300,0582,0620
Elman	0019,0029,0493,0607
Elta	0299,0486,0503,0592,0617
Emco	0477,0579
Emerson	0146,0155,0280,0447,0448,0470
.....	0472,0477,0481,0507,0510,0513,0518
.....	0523,0539,0550,0579,0590,0621,0624,0638
Emperor	0510,0621
envision	0544
Erres	0280,0513,0624
ESC	0280,0513
Etron	0280,0482,0503
Euroman	0280,0299,0310,0470,0513
Euromann	0569,0624
Europa	0280,0513,0624
Europhon	0000,0004,0019,0029,0030,0146
.....	0280,0486,0493,0600,0602,0607
Expert	0308,0466,0482,0495
Exquisit	0280,0477,0513,0624
Fagor Life	0280
FEILANG	0670,0679
FEILU	0665,0670,0679
FEIYAN	0687,0707,0710,0733
FEIYUE	0665,0670,0677,0678,0679,0694
.....	0697
Fenmenti	0447,0483,0513
Fenner	0033,0193,0240,0379,0390,0503
.....	0504,0617,0618
Ferguson	0302,0304,0315,0429,0430,0431
.....	0432,0443,0463,0481,0488,0489,0508,0516
.....	0528,0529,0532,0533,0536,0601,0605
.....	0624,0641,0646,0648,0652
Fidelity.....	0003,0034,0229,0280,0299
.....	0481,0482,0513,0515,0523,0581
.....	0586,0590,0594,0599,0627,0638
Filmnet	0202,0248
Filsai	0600
Finlandia	0314,0468,0480,0482,0488,0492
.....	0566,0581,0589,0595,0606
Finlux	0007,0008,0013,0025,0026,0029
.....	0035,0094,0161,0221,0280,0351,0447,0463

SETUP CODES FOR TV

.....	0464,0468,0471,0473,0483,0487,0492,0493
.....	0501,0518,0550,0561,0562,0566,0578,0584
.....	0596,0600,0602,0606,0607,0624
First line	0280,0299,0307,0327,0395,0450
.....	0451,0477,0481,0484,0489,0492
.....	0500,0503,0504,0513,0518,0520
.....	0555,0579,0594,0596,0599,0600
.....	0601,0606,0617,0618,0624
Fisher	0025,0036,0155,0167,0170,0255,0327
.....	0447,0463,0470,0492,0539,0561,0568,0594
.....	0596,0600,0606,0634,0635
Flint	0280,0300,0311,0456,0492,0497,0513
.....	0560,0606,0613,0620,0624
FNR	0607
Formenti	0539,0582,0584,0596,0599,0624
Formenti-Phoenix	0003,0008,0025,0037
.....	0038,0159,0299
Fortress	0447
Fraba	0280,0395,0470,0513,0568,0624
France Telecom	0266
Friac	0280,0310,0456,0470,0493,0503,0513
.....	0568,0607,0617,0626
Frontech	0477,0482,0486,0503,0579,0581
.....	0592,0600,0617
Fujitsu General	0466,0492,0503,0600
.....	0606,0607,0702
FULI	0701
Funai	0423,0451,0500,0550,0554
Funai	0016,0160
Galaxis	0280,0470,0513,0568,0607,0624
GANGTAL	0751
GANXIN	0665,0671,0677,0678,0694,0697
GBC.....	0002,0004,0019,0025,0026,0031,0033
.....	0039,0040,0041,0042,0300,0503,0504
.....	0596,0617,0618,0620
GE	0304,0510,0536
Geant Casino	0308,0495
GEC.....	0280,0481,0482,0492,0513,0546
.....	0581,0590,0600,0602,0606,0624
Geloso	0004,0019,0025,0032,0033,0039
.....	0149,0150,0483,0503,0504,0584
.....	0596,0617,0618
General	0302,0312
General Technic	0503,0617
Genesis	0503
Genexxa	0280,0300,0309,0482,0503,0513
.....	0581,0617,0620
Gibraltar	0544
Goldfunk	0500
Goldhand	0299
Goldline	0610
GoldStar	0003,0004,0043,0080,0153,0172
.....	0252,0269,0270,0280,0299,0333,0393
.....	0395,0399,0400,0476,0477,0481,0482
.....	0486,0498,0501,0513,0518,0528,0544
.....	0579,0581,0590,0592,0599,0600,0624
.....	0641,0663,0673,0677,0678,0694,0697
.....	0752,0794,0409,0410,0414
Gooding	0505,0619
Goodmans	0119,0276,0280,0304,0306
.....	0313,0349,0381,0383,0393,0395,0396,0397
.....	0422,0429,0446,0450,0471,0492,0500,0503
.....	0504,0505,0506,0507,0513,0516,0518,0520
.....	0523,0532,0533,0543,0545,0550,0552,0571
.....	0600,0602,0606,0617,0618,0619,0620,0624
.....	0626,0634,0638,0646,0648
Gorenje	0170,0173,0310,0470,0568,0569
GPM	0280,0620
Gradiente	0280,0548,0603
Graetz	0280,0452,0481,0482,0483,0505
.....	0523,0581,0584,0590,0597
Granada	0002,0004,0027,0041,0044
.....	0045,0046,0047,0048,0049,0280
.....	0304,0308,0452,0478,0480,0482
.....	0485,0487,0488,0495,0508,0509
.....	0513,0533,0556,0586,0587,0589,0593
.....	0598,0600,0602,0606,0616,0624,0636
Grandin	0274,0280,0286,0288,0300,0308
.....	0311,0456,0482,0497,0500,0501,0503,0504
.....	0510,0513,0518,0520,0560,0581,0582,0613
.....	0617,0618,0621,0624
Great Wall	0253
Grundig	0003,0010,0018,0020,0045,0050
.....	0051,0053,0054,0056,0094,0280,0313,0351
.....	0354,0355,0358,0360,0391,0446,0465,0474
.....	0475,0503,0505,0513,0516,0517,0563
.....	0574,0576,0617,0619,0624,0628,0629
Grunpy	0550
H-her	0518
Haier	0525,0757,0759,0766,0772,0773
.....	0829,0832,0839,0840,0841,0842,0855
.....	0859,0860,0872,0926
HAIHONG	0670,0679,0680,0681,0682
.....	0683,0684,0731,0757,0922
HAILE	0686,0701
HAIYAN	0665,0677,0678,0687,0694
.....	0697,0707,0710,0733
Halifax	0299,0600
Hampton	0299,0599,0600
Hanimex	0451,0554
Hanseatic	0025,0027,0037,0044,0052
.....	0055,0258,0280,0447,0451,0481,0486
.....	0503,0506,0510,0513,0516,0518,0570
.....	0582,0590,0592,0594,0600,0617

Six-in-one Universal Remote Controller with LCD Display

ENGLISH

4. Press the "OK" key again, the LCD displays **M1 00**
(If the display is not M1-00, press equipment key to adjust).
5. Press the "ON-OFF" key for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 01**
6. Press the "1-/-" key for a while, until the LCD displays **M1 25**; then loosen the key, the LCD displays **M1 02**
7. Press the "1" key for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 03**
8. Press the "3" key for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 04**
9. Press the "SET" key for once, the LCD displays **M1 TM**
10. Press the "TEMP" or "TEMP" on the menu to set the time clock; **19:00**
11. Press the "←" or "→" on the menu to set the hour and minute. **19:30**
12. Press the "OK" key for once, to complete the settings. LCD: **M1 00**
13. Press the "EXIT" key to return to the TV page. LCD: **TV T**
14. Aim the transmitting end of the remote controller at the receiving end of the TV set. When it is **19:30**, the remote controller will turn on the TV, and play the program on **Channel 13**.

7. Set/Cancel Key Transfer

Transfer the function key of a home appliance to the function key of another appliance.

Notes:

 
1. The key transfer code and learning code are both X999. therefore, after starting the key transfer function, you may have to set a code before using the key transfer function. The TV code is pre-set to be 0999; the VCR code is pre-set to be 1999; and the SAT code is pre-set to be 2999; and the DVD code is pre-set to be 3999; and the CD code is pre-set to be 4999.
2. When doing the key transfer, be sure to use a code that is not X999.
3. When doing the key transfer, the user will be reminded to choose a home appliance. But remember that the code to be transferred shall be the currently set code for the home appliance in concern. If the current code is X999, you cannot realize the key transfer.
4. No key transfer function is offered for the air-conditioner.

E.g.: to transfer the information on the "6" key of SAT onto the "7" key of VCR, then cancel such a transfer.

1. Press key VCR once to switch to VCR interface.



2. Press the "SET" key for about 5 seconds, to enter the sub-menu "CODE" state, then press the "OK" key.

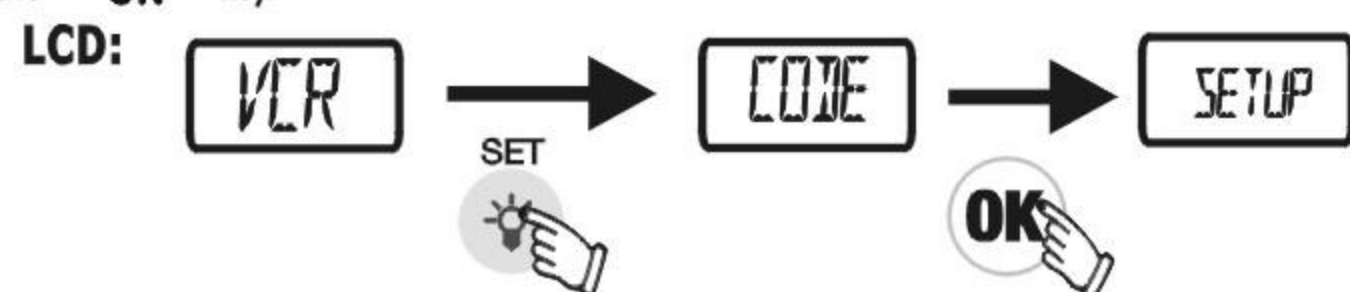


3. Enter a four-digit code 1999. If you enter a correct code, you will hear a beep, and the system will return to the "CODE" sub-menu.



4. Press the "▶◀" or "◀▶" on the menu, or select the mode on the LCD.



 5. Press the "OK" key, then press the "TEMP" key.

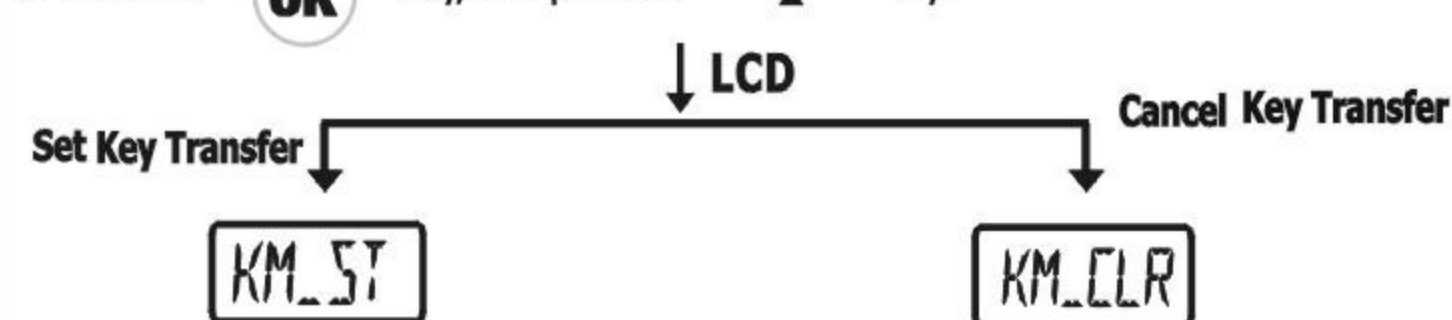

6. Press the "OK" key for once, the LCD displays



6. Press the "OK" key for once, the LCD displays



7. Press the "TEMP" key on the menu, the LCD displays



7. Press the key whose information has been transferred, the LCD displays



8. Press the "OK" key, the LCD displays



Press the function key 6, the LCD displays TO KEY, then press the function key 7. Repeat this step to transfer the target key.

Repeat this step to cancel the transferred key information. Example: Function key 7

8. Press the "SET" key, the LCD displays




9. Press the "SET" key, the LCD displays



then press the "EXIT" key to withdraw, and return to the VCR page.

9. Then press the "EXIT" key again, to withdraw and return to the normal state.

8. Reminder of low power

When the battery is going out of power, the screen of any interface of this remote controller will show a  mark, reminding you of the lower power in batteries.

SETUP CODES FOR TV

A.R.Systems0280,0497,0504,0628,0650
ACE0282
Acura0503,0617
Admira0032,0155,0447,0482,0539,0581
Adyson0299,0599,0600
Agashi0299
AGB0602
Agef0447,0539
Aiko0276,0280,0299,0503,0600
Aim0280,0513
Alwa0261,0322,0365,0490
Akai0005,0159,0169,0276,0280,0299,0300
.....0314,0327,0349,0393,0421,0422,0471
.....0481,0482,0485,0487,0488,0492,0498
.....0501,0503,0513,0516,0518,0523,0545
.....0563,0571,0575,0581,0586,0590,0595
.....0596,0602,0606,0624,0628,0638
Akib0554
Akiba0280,0300,0311,0451,0497,0510,0513
.....0554,0613,0620,0621,0624
Akito0280,0513,0609
Akura0280,0300,0307,0309,0480,0500,0503
.....0510,0513,0518,0589,0617,0620,0621,0624
Alaron0299,0550
Alba0274,0299,0300,0307,0313,0389,0422
.....0446,0450,0453,0477,0482,0486,0496
.....0500,0503,0505,0513,0518,0520,0523
.....0552,0579,0581,0592,0599,0612,0617
.....0619,0620,0624,0634,0638
Albiral0001
Allorgan0451,0554,0600
Allstar0280
Allstar0513,0624
ALWA0663,0711,0712
Ambassador0549
Amplivision0308,0470,0495,0568,0582
.....0600,0611
Amstrad0006,0280,0300,0309,0448,0503
.....0513,0520,0523,0549,0591,0602,0617
.....0620,0624,0638
Anam National0280,0503,0637
Anglo0503
ANHUA0655,0671,0686,0701
Anitech0280,0503,0510,0513,0617,0621,0624
Ansonic0280,0463,0467,0470,0500,0503
.....0565,0568,0570,0607,0617,0624
AOLINPIYA0687,0707,0710,0733
AOLINPU0758
Apollo0487
Arc En Ciel0511,0528,0531,0534,0608
.....0643,0649
Arcam0599,0600
Ardem0513,0518
Aristona0280,0513,0516,0624,0628
Arthur Martin0308,0482,0495
ASA0007,0009,0013,0032,0094,0155,0161
.....0447,0463,0539,0561,0578
Asberg0280,0493,0513,0576,0607
Asora0503,0617
Asuka0300,0600,0620
Atlantic0280,0299,0466,0513,0582
Atori0503
Auchan0308,0482,0495
Audiosonic0160,0280,0300,0389,0470,0472
.....0494,0501,0503,0504,0513,0518
.....0528,0568,0570,0572,0600,0610
.....0617,0620,0624,0641
Audioton0470,0472
Ausind0008
Autovox0004,0007,0012,0014,0015,0078
.....0079,0104,0153,0447,0477,0539,0576,0578
.....0579,0583,0594,0600
AWA0026,0027,0033,0159,0160,0189,0220
.....0275,0277,0278,0283,0299,0309,0446
.....0498,0502,0503,0508
Axxent0503
BAIHEHUA0677,0678,0694,0697
BAIHUA0670,0679,0687,0707,0710,0733
BAILE0666,0670,0673,0679,0680,0681
.....0682,0683,0684,0685,0696
Baird0162,0306,0492,0597
.....0600,0606,0648,0652
Bang & Olufsen0447,0539,0541
BAOHUASHI0687,0707,0710,0733
BAOSHENG0665,0670,0679
Barco0596
Basic Line0452,0497,0500,0503,0504,0510
.....0513,0516,0520,0600,0613,0617
.....0618,0620,0621,0624,0163,0280,0300
Baur0280,0474,0475,0481,0484,0513,0515
.....0574,0585,0590,0594,0624,0627,0632
Bazin0600
BEIJING0662,0665,0666,0670,0673,0675
.....0677,0678,0679,0680,0681,0682
.....0683,0684,0685,0687,0693,0694
.....0696,0697,0704,0705,0707,0710
.....0733,0745,0776,0780,0887,0919,0952
BEKO0170,0226,0280,0288,0353,0470,0472
.....0496,0498,0501,0518,0520,0568,0570
.....0572,0624
BENQ0948
Beon0496,0513,0612,0624,0280
Berthen0500
BEST0280,0494,0568,0569,0610

SETUP CODES FOR TV

Bestar0280,0395,0470,0504,0513,0568
.....0618,0624
Bestar-Daewoo0504
Binatone0600
Black Diamond0520
Black Panther0493
Black Star0477
Blacktron0510
Blackway0510
Blaupunkt0017,0018,0020,0054,0101,0231
.....0232,0233,0234,0236,0241,0354,0356,0446
.....0465,0474,0475,0497,0563,0574
Blue Sky0280,0288,0300,0307,0311,0313,
.....0497,0500,0501,0505,0510,0513
.....0516,0518,0520,0613,0620,0621,0624
Blue Star0510,0621
Bondstec0477,0579
Boots0503,0600,0609
BPL0026,0160,0162,0163,0280,0510,0513
.....0621,0624
Brandt0302,0304,0315,0395,0511,0528
.....0529,0531,0532,0533,0534,0536,0605,0608
.....0641,0643,0646,0649
Brinkmann0280,0472,0496,0500,0513,0612
.....0624
Brionvega0104,0155,0164,0165,0200,0201
.....0257,0280,0319,0447,0539,0591
Britannia0299,0599,0600
Bruns0158,0447,0539
BSR0016,0019,0021,0451,0482,0554,0596
BTC0300,0620
Bush0022,0280,0300,0307,0313,0381
.....0389,0392,0422,0444,0445,0446
.....0450,0451,0453,0481,0484,0500
.....0503,0504,0505,0510,0513,0516
.....0518,0520,0523,0525,0554,0585
.....0590,0596,0600,0609,0617,0618
.....0619,0620,0621,0624,0634,0638
Cabletime0246,0247,0251
CAIHONG0665,0670,0679
CAILING0756
CAIXING0677,0678,0694,0697,0727
Carad0280,0286,0456,0500,0520,0560
Carena0280,0311,0497,0513,0613,0624
Carnivale0544
Carrefour0446,0624,0634
Cascade0280,0503,0513,0617,0624
Casio0280,0513
Catha0280
Cathay0513,0624
caton0620
CCE0280,0513,0624
Centrum0520
Centurion0280,0513,0624
Century0145,0146,0155,0447,0477,0489
.....0539,0579
CGE0019,0023,0024,0145,0151,0169,0170
.....0231,0470,0477,0496,0568,0576,0579,0596
.....0612
CGM0093,0357
CHANGCHENG0655,0665,0666,0670,0671
.....0673,0677,0678,0679,0680,0681,0682
.....0683,0684,0685,0687,0694,0696
.....0697,0707,0710,0733
CHANGFEI0665,0670,0679,0696,0777
CHANGFENG0665,0678,0687,0699,0700
.....0707,0710,0733
CHANGHAI0665,0670,0679,0777
CHANGHONG0654,0662,0663,0664,0665
.....0668,0670,0680,0682,0687,0705,0706
.....0711,0712,0721,0725,0740,0741,0742
.....0745,0746,0747,0754,0813,0816,0836
.....0837,0838,0880,0942,0943,0944,0945
.....0946,0951
Chaparral0216
CHENGDU0665,0679
CHUANGJIA0727,0755
CHUNFENG0670,0679,0687,0707,0710
.....0733,0778
CHUNLAN0761,0785,0796
CHUNSUN0665,0670,0679
Cimline0300,0503,0617,0620
City0503,0617
Clarivox0001,0166,0167,0513,0607,0624
Clatronic0274,0280,0300,0395,0396,0470
.....0477,0493,0503,0513,0518,0523,0568,0576
.....0579,0582,0600,0607,0617,0620,0624,0638
Clayton0520
CODIAM0138
Concorde0503
Condor0280,0299,0470,0477,0496,0503
.....0510,0513,0568,0579,0582,0607,0617
.....0621,0624
CONROWA0654,0660,0661,0662,0664
.....0670,0679,0687,0699,0700,0702,0707,0709
.....0710,0727,0753,0785,0858,0912
Contec0016,0033,0299,0446,0503,0513
.....0599,0617,0634
Continental0382
Continetal Edison0302,0303,0505,0511,
.....0528,0529,0531,0534,0605
.....0608,0619,0641,0643,0649
Cosmel0494,0503,0513,0610,0624
Crosley0024,0025,0145,0155,0231,0447